

INTENDED FOR USE BY PROFESSIONAL EQUIPMENT OPERATORS


# OPERATING INSTRUCTIONS



908 W. Main • P.O. Box 368  
Laurel, MT USA 59044  
(1) 800-548-7341  
(1) 406-628-8231  
[www.wpg.com](http://www.wpg.com)

 **READ AND UNDERSTAND BEFORE  
OPERATING THIS EQUIPMENT**

APPLICABLE TO SERIAL NUMBERS 20231440  
AND LATER. FOR EARLIER NUMBERS,  
SEARCH WPG'S [ARCHIVE](#).

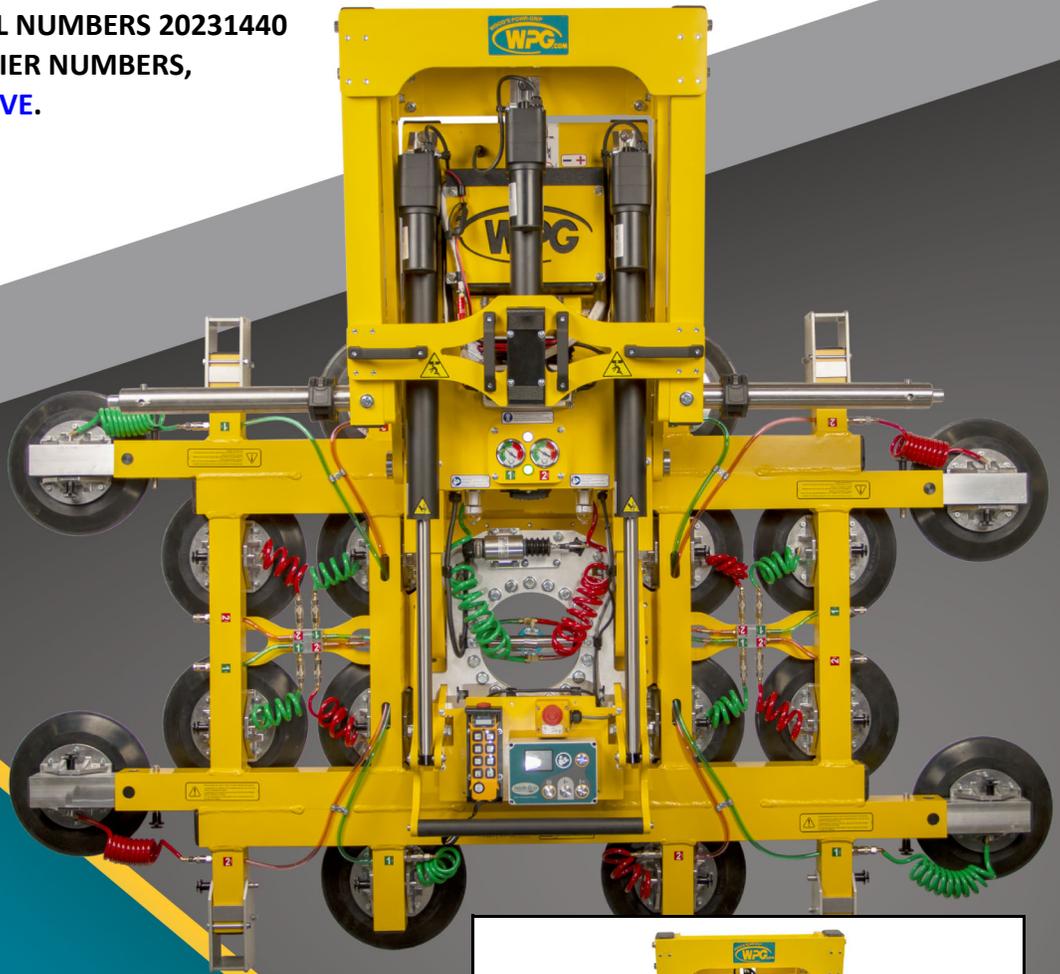

**MANUL ROTATOR /  
POWER FILTER 2800,  
WITH INTELLI-GRIP®  
TECHNOLOGY, DC-VOLTAGE**  
(Available with INTEGRATED COUNTER-BALANCER)

Model number: MRPT1611LDC3

Original Instructions © Wood's Powr-Grip Co., Inc.



# TABLE OF CONTENTS

<b>SPECIFICATIONS</b> .....	<b>3</b>
<b>SAFETY</b> .....	<b>5</b>
<b>OPERATING FEATURES</b> .....	<b>6</b>
LIFTER FEATURES.....	6
INTELLI-GRIP® CONTROL UNIT FEATURES .....	7
<b>ASSEMBLY</b> .....	<b>8</b>
TO CHANGE THE PAD FRAME CONFIGURATION .....	12
TO ASSEMBLE THE INTEGRATED COUNTER-BALANCER .....	16
<b>INTENDED USE</b> .....	<b>17</b>
LOAD CHARACTERISTICS.....	17
INDIRECT LOADING .....	18
OPERATING ENVIRONMENT .....	18
DISPOSAL OF THE LIFTER .....	18
<b>OPERATION</b> .....	<b>19</b>
BEFORE USING THE LIFTER.....	19
TO PREPARE FOR LIFTING.....	23
TO ATTACH THE PADS TO A LOAD .....	25
TO LIFT AND MOVE THE LOAD.....	27
TO USE THE EMERGENCY STOP BUTTON .....	29
TO ROTATE THE LOAD .....	30
TO TILT THE LOAD .....	31
TO USE THE INTEGRATED COUNTER-BALANCER.....	32
TO PREPARE THE LIFTER FOR USE WITH A CB3 COUNTER-BALANCER .....	33
TO SET DOWN THE LOAD .....	34
AFTER USING THE LIFTER.....	36
<b>INSPECTIONS AND TESTS</b> .....	<b>38</b>
INSPECTION SCHEDULE .....	38
TESTING .....	39
<b>MAINTENANCE</b> .....	<b>42</b>

# TABLE OF CONTENTS


VACUUM PAD MAINTENANCE.....	42
12-VOLT BATTERY RECHARGE.....	44
NOTIFICATION BUZZER BATTERY REPLACEMENT .....	45
INTELLI-GRIP® DIAGNOSTIC CODES .....	46
<b>REPLACEMENT PARTS.....</b>	<b>52</b>
<b>REGISTRATION AND LIMITED WARRANTY .....</b>	<b>53</b>
TO REGISTER THIS WPG PRODUCT .....	53
ABOUT THE LIMITED WARRANTY .....	53

# SPECIFICATIONS

<b>Product Description</b>	Designed for use with hoisting equipment, the MRPT1611LDC3 lifter supports loads using vacuum and manipulates loads using manual 360° rotation and powered 90° tilt motions.
<b>Vacuum Pads</b>	Sixteen 11" [28 cm] nominal diameter, lipped (Model G3370), standard rubber <sup>1</sup>
<b>Pad Spread<sup>2</sup></b>	(to outer edges)
<b>Length — Maximum</b>	148½" [377 cm]
<b>Length — Minimum</b>	35½" [90 cm]
<b>Width — Maximum</b>	52½" [133 cm]
<b>Width — Minimum</b>	14" [36 cm]
 <b>Maximum Load Capacity<sup>3, 4</sup></b>	Per pad: 175 lbs [79.5 kg]
<b>With 4 Pads</b>	700 lbs [320 kg]
<b>With 8 Pads</b>	1,400 lbs [635 kg]
<b>With 12 Pads</b>	2,100 lbs [955 kg]
<b>With 16 Pads</b>	2,800 lbs [1,270 kg]
 <b>Lifter Weight</b>	555 lbs [252 kg] 1,405 lbs [637 kg] with optional Integrated Counter-Balancer and all counterweight
<b>Power Source</b>	12 volts DC, up to 50 amps with powered motion
<b>12V Battery Capacity</b>	80 amp-hours
<b>Remote Control System</b>	Radio controls – FCC, CE, IC, RSM and ACMA compliant <sup>5</sup>
 <b>Rotation Capability</b>	Manual, 360°, with automatic locking at each 18° (as required)
 <b>Tilt Capability</b>	Powered, 90°; Time = approx. 45 seconds; Duty cycle = 10% <sup>6</sup>
<b>Product Options</b>	<i>Available</i> with Integrated Counter-Balancer. See separate instructions about other options.
 <b>Operating Elevation</b>	Up to 7,500' [2,286 m]
 <b>Operating Temperatures</b>	32° — 104° F [0° — 40° C]
<b>Service Life</b>	16,000 lifting cycles, when used and maintained as intended <sup>7</sup>
<b>Software Version</b>	Intelli-Grip® 8.2
<b>ASME Standard BTH-1</b>	Design Category "B", Service Class "0"
<b>Troubleshooting Guide</b>	<a href="#">TST-016_GENERIC_LEAK_TEST_rev_2014-086</a>

- 1..... Available with [other rubber compounds](#) for special purposes.
- 2..... The illustrations under "[TO CHANGE THE PAD FRAME CONFIGURATION](#)" show the Pad Spread and Maximum Load Capacity for approved MRPT1611LDC pad frame configurations.
- 3..... The Maximum Load Capacity is rated and verified at a vacuum of 16" Hg [-54 kPa] on clean, smooth, nonporous flat surfaces with a friction coefficient of 1. Rating is verified by testing on polycarbonate (or metal with a painted surface) with a coefficient of friction similar to plain (non-coated) glass and a surface temperature at approx. 70° F [21° C].
- 4..... Pad compound, load rigidity, strength, surface conditions, overhang, angle, center of gravity and temperature affect lifting capacity. A "qualified person" should evaluate the effective lifting capacity for each use (see definition under "[Rated Load Test](#)").
- 5..... "RSM and ACMA compliant" means that the remote control system is eligible for the Regulatory Compliance Mark (RCM).
- 6..... Rated under maximum actuator load; tilt duty increases as load weight decreases.
- 7..... Vacuum pads, filter elements and other wear-out items are excluded.

# SPECIFICATIONS

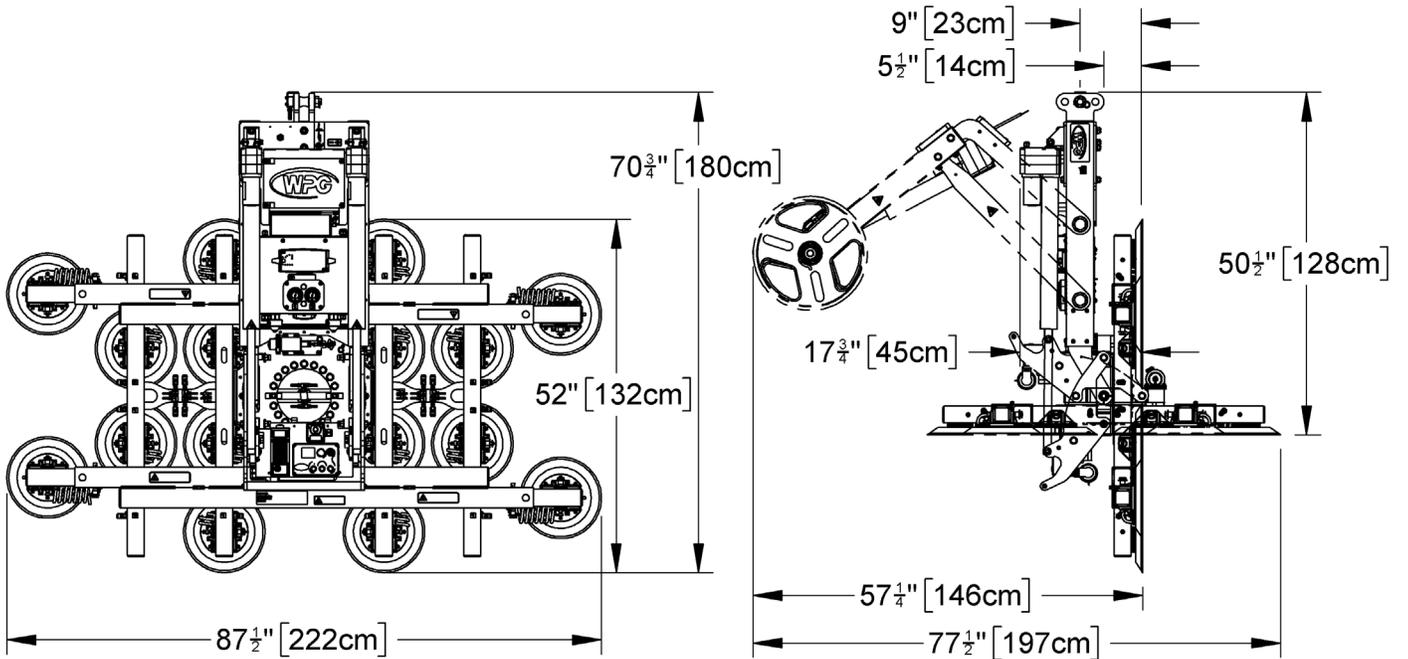

# SAFETY


-  Wear personal protective equipment that is appropriate for the load material. Follow trade association guidelines.
-  Do not remove or obscure safety labels.
-  Do not make any modifications to the lifter. Modifying the lifter will void the "LIMITED WARRANTY".
-  Use the lifter only in an approved "OPERATING ENVIRONMENT" (see "INTENDED USE").
-  Make sure to consider all possible effects of "INDIRECT LOADING" on lifting capacity (see "INTENDED USE").
-  Do not use a lifter that is damaged, malfunctioning, or missing parts.
-  Do not use a lifter if the sealing edge of any vacuum pad is cut or otherwise damaged.
-  Do not use a lifter to lift cracked or broken glass.
-   Do not exceed the Maximum Load Capacity or lift loads the lifter is not designed for (see "INTENDED USE").
-   Do not use a lifter if the Maximum Load Capacity or any safety label appears to be missing or obscured.
-  Make sure the contact surfaces of loads and vacuum pads are clean before attaching lifters (see "MAINTENANCE").
-  Position vacuum pads correctly on the loads before lifting (see "OPERATION").
-  Do not lift a load if any vacuum indicator shows inadequate vacuum.
-  Keep unauthorized personnel away from the lifter, to avoid injury in case of an unintended load release.
-  Do not touch the vacuum release controls during a lift.
-  Do not allow people to ride on the lifter or the load.
-  Do not lift a load higher than necessary or leave suspended loads unattended.
-  Do not position a loaded or unloaded lifter over people.
-  Before servicing a powered lifter, place the power control in the inactive position and, when possible, disconnect the power source.

# OPERATING FEATURES

Features shown here are underlined> on their first appearance in each section following.

## LIFTER FEATURES

- 1 NOTIFICATION BUZZER
  - 2 STROBE LIGHT
  - 3 9V BATTERY
  - 4 LIFT BAR
  - 5 12V BATTERY
  - 6 VACUUM RESERVE TANK
  - 7 BATTERY CHARGER
  - 8 Enclosure with VACUUM PUMPS, CIRCUIT BOARDS and VACUUM SENSORS
  - 9 AIR FILTER
  - 10 VACUUM PAD with MOVABLE MOUNT
  - 11 QUICK CONNECTOR
  - 12 CONTROL HANDLES
  - 13 RADIO TRANSMITTER with HOLDER
  - 14 INTELLI-GRIP® CONTROL UNIT
  - 15 PARKING STAND
  - 16 TELESCOPING PAD ARM
  - 17 EMERGENCY STOP BUTTON
  - 18 PAD FRAME
  - 19 ROTATION LATCH
  - 20 VACUUM LIFT LIGHT
  - 21 VACUUM GAUGES
  - 22 LOAD SENSOR / COUNTER-BALANCER POSITION LIGHT
  - 23 INTEGRATED COUNTER-BALANCER
  - 24 TILT ACTUATOR
- Not shown: COUNTERWEIGHT PLATES, ADJUSTABLE LIFT POINT with LIFT SPOOL and POSITION PIN/LOAD SENSOR

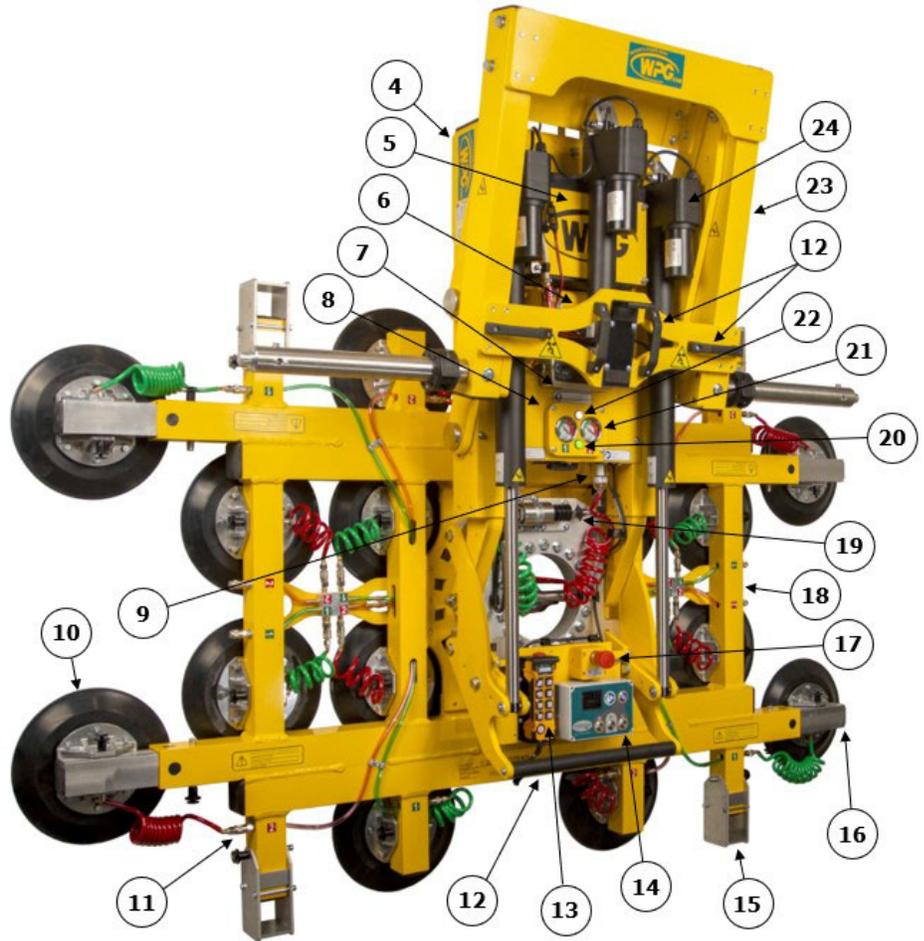


*Note: An MRPT1611LDC3 lifter with the optional Integrated Counter-Balancer is shown. Although some of the following photos do not show this specific lifter, they all illustrate how this kind of lifter functions.*

For information about specific parts, see [“REPLACEMENT PARTS”](#) and/or any separate instructions for Product Options.

# OPERATING FEATURES

## INTELLI-GRIP® CONTROL UNIT FEATURES

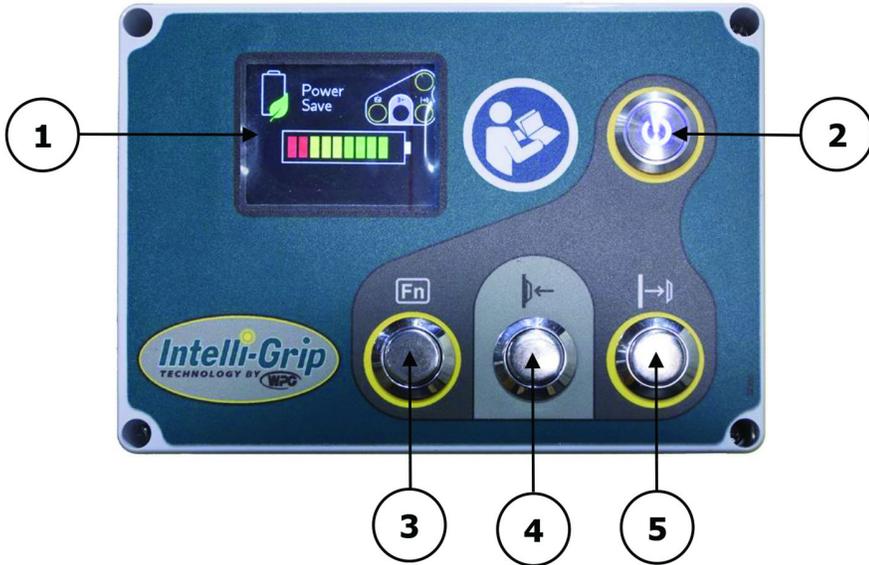


- 1 LCD SCREEN with 12V BATTERY GAUGE
- 2 POWER BUTTON
- 3 "FUNCTION" BUTTON
- 4 "ATTACH" BUTTON
- 5 "RELEASE" BUTTON

# ASSEMBLY

- 1) Remove all shipping materials and save them with the shipping container for future use.
- 2) Connect the electrical connectors (figs. 2A-B).

Install the 9V battery for the notification buzzer as directed under “[NOTIFICATION BUZZER BATTERY REPLACEMENT](#)”.

- 3) Power up the lifter and radio transmitter (see “[TO PREPARE FOR LIFTING](#)”).

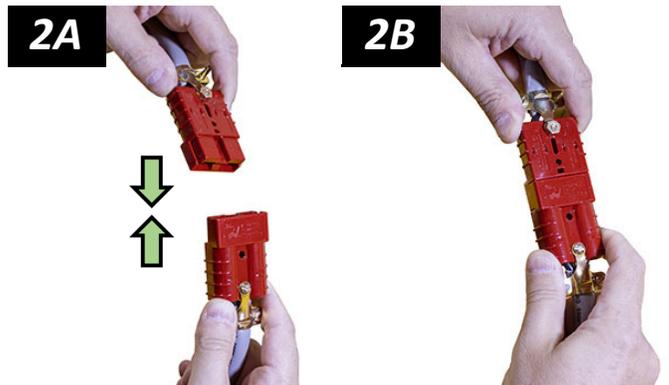

- 4) Select a screen language: When the lifter is powered up for the first time, the Intelli-Grip® control unit prompts the operator to select a language for the LCD screen.



To scroll down, press the “release” button (|→).



To scroll up, press the “attach” button (|←).



To select a language, press the “function” button (Fn).<sup>1, 2</sup>



*Note: A similar process is used to navigate all menus.*

1..... To change the language again, refer to INTELLI-GRIP OPERATOR MENUS section of [SERVICE MANUAL](#).


2..... Afterwards, the Intelli-Grip control unit will prompt the operator to set the Lifter Weight. This will be accomplished later (see “[Setting the Lifter Weight](#)”).

# ASSEMBLY

5A



5B

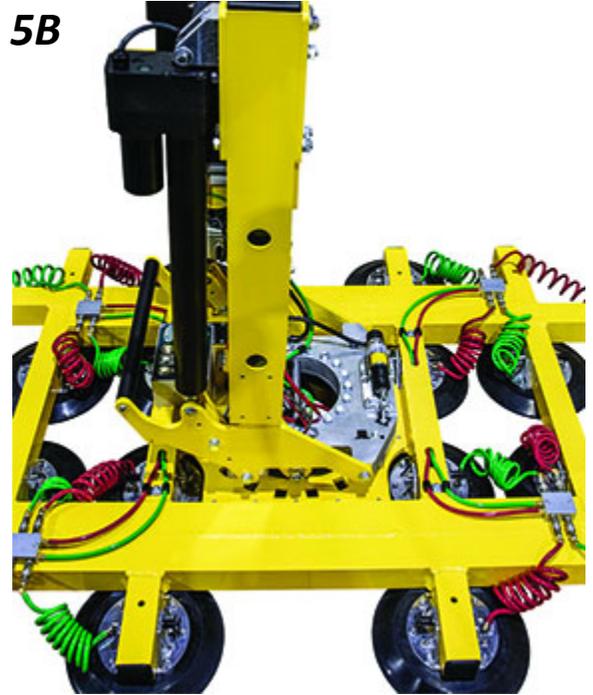


5) Engage the tilt actuators to raise the lift bar (figs. 5A-B); see “[Preparing to Use the Remote Control System](#)” and “[TO TILT THE LOAD](#)”.


6) Position the adjustable lift point:

6.1) Choose a position as needed for the lifter's expected use:

- **Position 1:** If the lifter *is not* equipped with the optional integrated counter-balancer, this position provides the best hang angle, whether the lifter is loaded or unloaded.
- **Position 2:** If the lifter is equipped with the integrated counter-balancer, this position provides the best hang angle in most cases, whether the lifter is loaded or unloaded.
- **Position 3:** If the lifter is equipped with the integrated counter-balancer, this position provides the best hang angle while the lifter is unloaded and the pad frame is oriented horizontally.

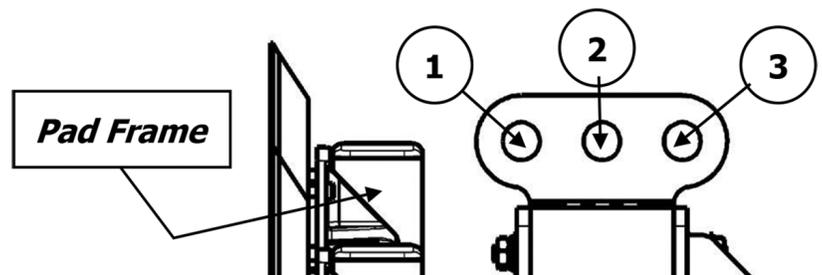

# ASSEMBLY

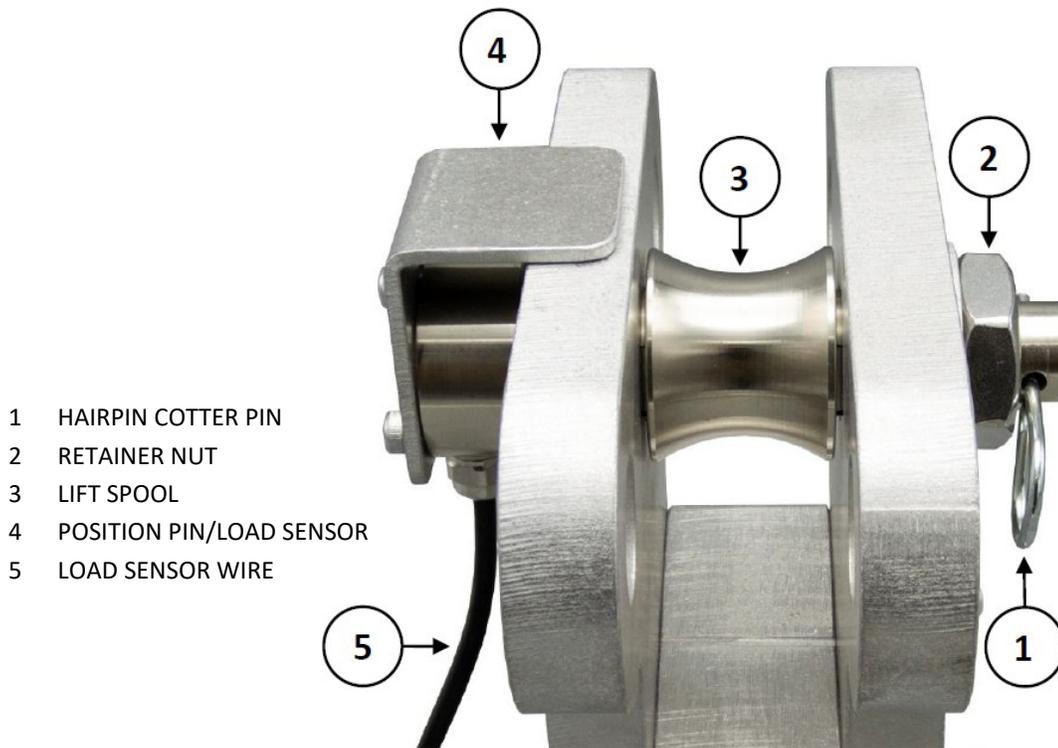

- 1 HAIRPIN COTTER PIN
- 2 RETAINER NUT
- 3 LIFT SPOOL
- 4 POSITION PIN/LOAD SENSOR
- 5 LOAD SENSOR WIRE




If a position change is needed, ...

- 6.2) Remove the hairpin cotter pin and retainer nut.
- 6.3) Holding onto the lift spool, remove the position pin/load sensor from its existing location (fig. 6A).
- 6.4) Install the lift spool and position pin/load sensor in the new location (fig. 6B).
- 6.5) Reinstall the nut and hand-tighten. However, do **not** overtighten.
- 6.6) Reinstall the hairpin cotter pin, to secure the nut.

*Note: Route the load sensor wire as needed to prevent any damage to it.*

## 7) Suspend the lifter from appropriate hoisting equipment:

- 7.1) Select a crane and/or hoist rated for the Maximum Load Capacity plus the Lifter Weight, including the integrated counter-balancer and added counterweight plates, when so equipped.

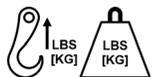

*Note: Any lifter use must comply with all statutory or regulatory standards for hoisting equipment in your region.*

# ASSEMBLY

- 7.2) Use rigging to connect the hoisting hook with the lift spool (fig. 7A). **The rigging must have sufficient length to ensure the hook does not interfere with the load.**



**Use only rigging rated for Maximum Load Capacity plus Lifter Weight.**



**Make sure hoisting hook has restraining latch (see arrow in fig. 7A).**

- 7.3) Use the hoisting equipment to remove the lifter from the shipping container. Avoid damaging the vacuum pads.




- 8) Arrange the pad frame for optimal load support (see following sections). Remove the pad covers (fig. 8A) and save them for future use.
- 9) If the lifter has the integrated counter-balancer, complete its assembly as directed (see [“TO ASSEMBLE THE INTEGRATED COUNTER-BALANCER”](#)).
- 10) Perform tests as required under [“TESTING”](#).



# ASSEMBLY

## TO CHANGE THE PAD FRAME CONFIGURATION

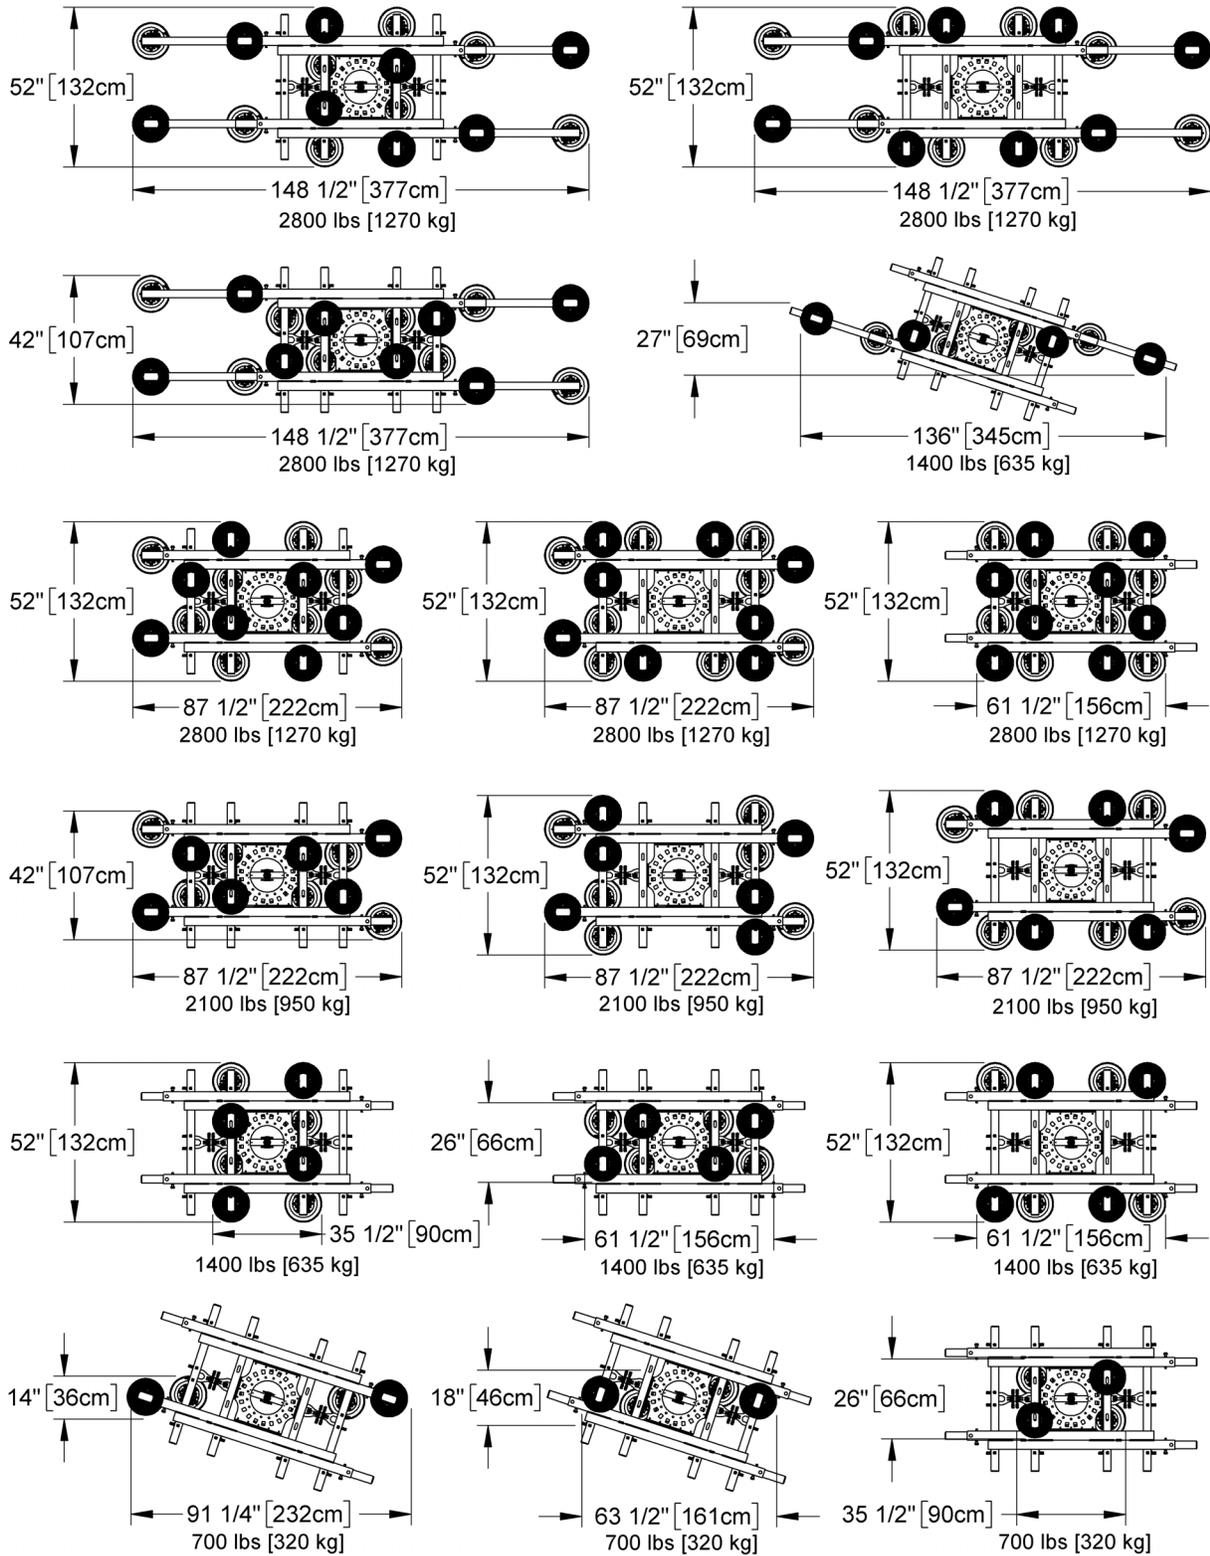

# ASSEMBLY

Various pad frame configurations enable the lifter to match different load dimensions and weights. The illustrations on the preceding page show all approved configurations.

**Caution:** Connect the vacuum pads to the 2 circuits (marked “1” and “2” on lifter). Pads belonging to each circuit are shown either shaded or unshaded in the preceding illustrations.

- 1) Choose an approved configuration to maximize support across the load surface and to minimize load overhang (see “[LOAD CHARACTERISTICS](#)”).

**Use only approved pad frame configurations.**

- 2) Reposition telescoping pad arms and reposition or remove movable pad mounts as needed (see following sections):

- To support the maximum load weight, you must install all 16 vacuum pads on the pad frame and connect all vacuum hoses to the pads (see “[Connecting/Disconnecting Vacuum Hoses](#)”).


**Route vacuum hoses as needed to prevent damage to them during lifter operation.**

- To support larger load dimensions, you must extend telescoping pad arms on the pad frame.
- To support smaller dimensions and weights, you may retract telescoping pad arms or remove some vacuum pads and disconnect the corresponding vacuum hoses, **provided the lifter still has sufficient capacity to support the load in question.**<sup>1</sup>

## Removing Parking Stands

Parking stands must be removed to accommodate certain pad frame configurations:

- 1) Remove the cotterless hitch pin (fig. 1A).
- 2) Slide the parking stand off the pad frame (fig. 2A).
- 3) Repeat steps 1-2 to remove the other parking stands.

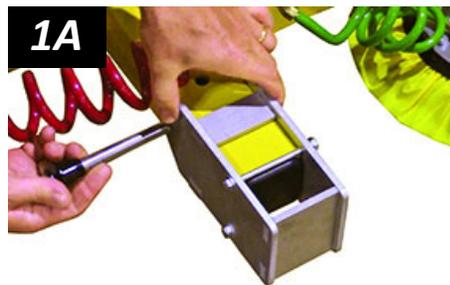

1..... Whenever a quick connector is disconnected, the corresponding vacuum pad does not contribute to the lifting capacity, whether or not the pad is mounted on the pad frame.

# ASSEMBLY

## Extending/Retracting Telescoping Pad Arms

- 1) Remove the cotterless hitch pin and slide a telescoping pad arm into or out of the pad frame until the hitch pin holes align at the desired position (fig. 1A).<sup>1</sup>



- 2) Reinsert the pin to secure the telescoping pad arm (fig. 2A).
- 3) Repeat steps 1-2 to reposition other telescoping pad arms, as needed.

## Repositioning (or Removing) Movable Pad Mounts

- 1) Remove the cotterless hitch pin from a movable pad mount (fig. 1B).



- 2) Move the pad mount to the desired position on the pad frame and align the pin holes (fig. 2B).



- 3) Reinsert the pin to secure the pad mount (fig. 3B).
- 4) Repeat steps 1-3 to position other pad mounts, as needed.



To remove a vacuum pad altogether, disconnect the corresponding vacuum hose (see next section) and remove the pad mount as previously directed. Store removed components in a clean, dry location.



**Removing or disconnecting any vacuum pad reduces lifting capacity.**

1..... Pad arms should not be removed during normal operation of the lifter.

# ASSEMBLY

## Connecting/Disconnecting Vacuum Hoses

**!** Make sure quick connectors seal completely and all vacuum hoses function correctly (see “Vacuum Test”).

To *connect* a vacuum hose, push the male and female ends of the quick connector together until they lock (figs. 1A-B).




To *disconnect* a hose, move the release ring on the female end until the quick connector separates (figs. 2A-B).



Make sure the hoses are connected correctly: green to circuit “1” and red to circuit “2” (fig. 3A).

The 2 vacuum gauges are labeled to indicate the related circuits (fig. 4A).

*Note: The gauge face colors do not correspond with the circuit colors.*

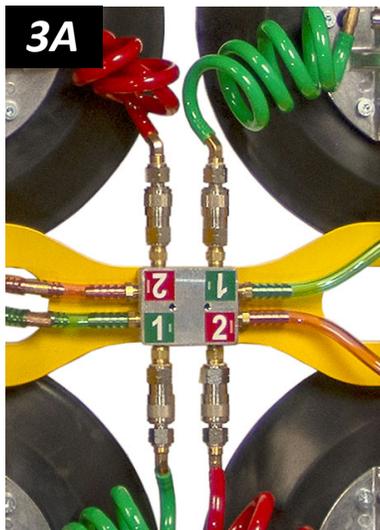

# ASSEMBLY

## TO ASSEMBLE THE INTEGRATED COUNTER-BALANCER


If the lifter is equipped with an optional integrated counter-balancer, complete the assembly as follows:

- 1) Make sure the counter-balancer is in the fully retracted position (fig. 1A).
- 2) Add counterweight plates to the support arms as needed (figs. 2A-B), one plate at a time per side; see charts below to determine the minimum number of plates to use.
- 3) Secure the mounted plates with weight clamps (fig. 3A).



		Load Weight with Thickness ≤ 1.5" [3.8 cm]		
		Lift Point Position 1	Lift Point Position 2	Lift Point Position 3
Minimum Number of Counterweight Plates 45 lbs [20.4 kg] each	4	1,130 lbs [513 kg]	790 lbs [359 kg]	590 lbs [268 kg]
	6	1,700 lbs [771 kg]	1,190 lbs [540 kg]	890 lbs [404 kg]
	8	2,270 lbs [1,030 kg]	1,590 lbs [722 kg]	1,190 lbs [540 kg]
	10	2,800 lbs [1,270 kg]	1,990 lbs [903 kg]	1,490 lbs [676 kg]
	12	2,800 lbs [1,270 kg]	2,390 lbs [1,084 kg]	1,790 lbs [812 kg]
	14	2,800 lbs [1,270 kg]	2,790 lbs [1,266 kg]	2,090 lbs [948 kg]
	16	2,800 lbs [1,270 kg]	2,800 lbs [1,270 kg]	2,390 lbs [1,084 kg]
		Load Weight with Thickness = 2"-6" [5.1-15.2 cm] <sup>1</sup>		
		Lift Point Position 1	Lift Point Position 2	Lift Point Position 3
Minimum Number of Counterweight Plates 45 lbs [20.4 kg] each	4	840 lbs [381 kg]	630 lbs [286 kg]	490 lbs [223 kg]
	6	1,260 lbs [572 kg]	950 lbs [431 kg]	740 lbs [336 kg]
	8	1,680 lbs [762 kg]	1,260 lbs [572 kg]	990 lbs [449 kg]
	10	2,100 lbs [953 kg]	1,580 lbs [717 kg]	1,230 lbs [558 kg]
	12	2,530 lbs [1,148 kg]	1,900 lbs [862 kg]	1,480 lbs [672 kg]
	14	2,800 lbs [1,270 kg]	2,210 lbs [1,003 kg]	1,730 lbs [785 kg]
	16	2,800 lbs [1,270 kg]	2,520 lbs [1,143 kg]	1,980 lbs [898 kg]

1..... This table also applies to curtainwall sections and other loads where the center of gravity is 1" to 3" [2.5 cm to 7.6 cm] away from the vacuum pads. For example, lifting 1" [2.5 cm] thick material using 2.5" [6.4 cm] pad spacers to avoid mullions. Contact WPG for more information.

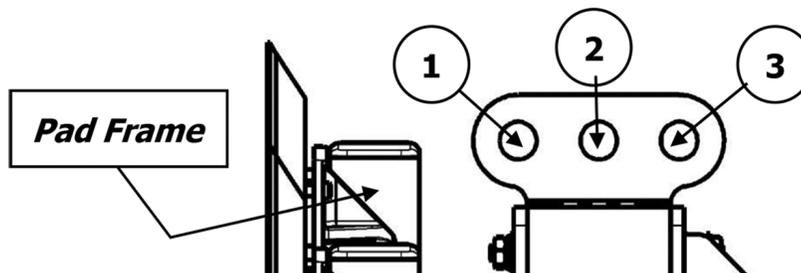

## LOAD CHARACTERISTICS

Make sure the vacuum lifter is intended to handle each load according to these requirements:



**Do NOT lift explosives, radioactive substances or other hazardous materials.**



- The load weight must not exceed the Maximum Load Capacity.
- The load must be a single piece of relatively nonporous material with a flat and relatively smooth contact surface.<sup>1, 2</sup> To determine whether the load is too porous or rough, perform the “[Lifter/Load Compatibility Test](#)”.
- The load's contact surface must be able to obtain a friction coefficient of 1 with the lifter's vacuum pads (see “[Pad-to-Load Friction Coefficient](#)”). Otherwise, the capacity should be derated appropriately.
- The load's surface temperature must not exceed 150° F (66° C).<sup>3</sup>
- The load's *minimum* length and width are determined by the current Pad Spread (see “SPECIFICATIONS”).
- The load's *maximum* length and width are determined by its allowable overhang.<sup>4</sup>
- 6" [15 cm] is the allowable thickness at Maximum Load Capacity.<sup>5</sup>



*Note: Standard vacuum pads can stain or deform load surfaces with light colors or soft coatings. Test such surfaces for damaging effects before using the lifter on them.*<sup>6</sup>

1..... Although concave vacuum pads can also attach to some curved loads, curvature can reduce lifting capacity. Contact WPG for more information.

2..... A “single piece” of material includes curtainwall assemblies, unitized glazing systems and similar construction units.

3..... Vacuum pads made from a heat-resistant rubber compound can enable you to lift loads with higher surface temperatures. Contact WPG or an authorized dealer for more information.

4..... The allowable overhang is the amount of load material that can extend sideways beyond vacuum pads without breaking or otherwise being damaged. This depends on the load material, its thickness, and the angle of handling (if any). Since every material has different physical properties, the allowable overhang must be evaluated separately for each load type. Contact WPG or an authorized dealer for more information.

5..... However, the allowable thickness increases as load weight decreases. Contact WPG for more information.

6..... Alternative rubber compounds are available for these purposes. Contact WPG or an authorized dealer for more information.

# INTENDED USE

## INDIRECT LOADING

Make sure to account for dynamic loading or other inadvertent loading that can negatively affect lifting capacity, such as:

- Weight amplification that results when a loaded vacuum lifter abruptly starts/stops moving, changes direction or bounces up and down (eg, when a telehandler transports a loaded lifter across rough terrain).
- External force that effectively increases the weight of a lifter's attached load (eg, when a load of sheet material reacts to wind gusts).



**Indirect loading can reduce lifting capacity.**

## OPERATING ENVIRONMENT

Make sure the lifter is suitable for each work environment, given the following restrictions:

- This lifter is not intended for any environment that is dangerous to the operator or damaging to the lifter. Avoid environments containing explosives, caustic chemicals and other dangerous substances.




**Never use lifter in dangerous environments.**



**Metal particles and similar environmental contaminants could result in vacuum pump failure.**

- The work environment is limited by the Operating Elevation and Operating Temperatures.<sup>1, 2</sup>
- The lifter is not designed to be watertight. Do not use it in rain or other unsuitable conditions.

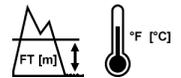

**Moisture can reduce lifting capacity.**

## DISPOSAL OF THE LIFTER

After the Service Life of the lifter has ended (see "SPECIFICATIONS"), dispose of it in compliance with all local codes and applicable regulatory standards.

*Note: Special disposal regulations may apply to the 12V battery.*

1..... Although lifter use may be possible at higher elevation, lifting capacity is reduced whenever the lifter is unable to attain vacuum in the green range on the vacuum gauges. Contact WPG for more information.

2..... Special provisions may allow the lifter to operate outside the specified temperature range. Contact WPG for more information.

## BEFORE USING THE LIFTER

Determine whether the vacuum lifter is capable of each intended task (see “SPECIFICATIONS” and “[INTENDED USE](#)”). Then complete the following preparations:

### Taking Safety Precautions

- Be trained in all industry and regulatory standards for lifter operation in your region.
- Follow trade association guidelines about precautions needed for each load material.



***Read all directions and safety rules before using lifter.***



***Always wear appropriate personal protective equipment.***

### Performing Inspections and Tests

- Follow the “[INSPECTION SCHEDULE](#)” and “[TESTING](#)”.
- Service the 2 air filters whenever a bowl contains liquid or other contaminants, or an element appears dirty (see “[AIR FILTER MAINTENANCE](#)” in [SERVICE MANUAL](#)).
- Make sure the notification buzzer is clearly audible at the maximum distance between the operator and the lifter, despite any barriers or obstacles.<sup>1, 2</sup>



***Examine air filters regularly and service when needed.***



***Make sure notification buzzer can be heard over noise at operator position.***

1..... Maximum buzzer volume is 95 dBA at 2' [60 cm]. If CE or UKCA Standards apply, consult EN 7731 to make sure the buzzer is compliant.

2..... The “[Vacuum Test](#)” provides a convenient opportunity to check this.


## Checking the 12-Volt Battery



***Always check 12V battery energy before every lift.***

While the lifter is powered up, a battery gauge on the LCD screen displays the current energy level.<sup>1, 2</sup>

- If battery energy is in the red range, discontinue lifter use and charge the battery (see “[12-VOLT BATTERY RECHARGE](#)”).
- If battery energy continues to decrease and you try to attach the lifter to a load, the notification buzzer will sound continuously and the LCD screen will display “Lockout (low 12V battery)”, along with a diagnostic code (see “[INTELLI-GRIP® DIAGNOSTIC CODES](#)”). In this case, you must charge the battery in order to continue using the lifter.

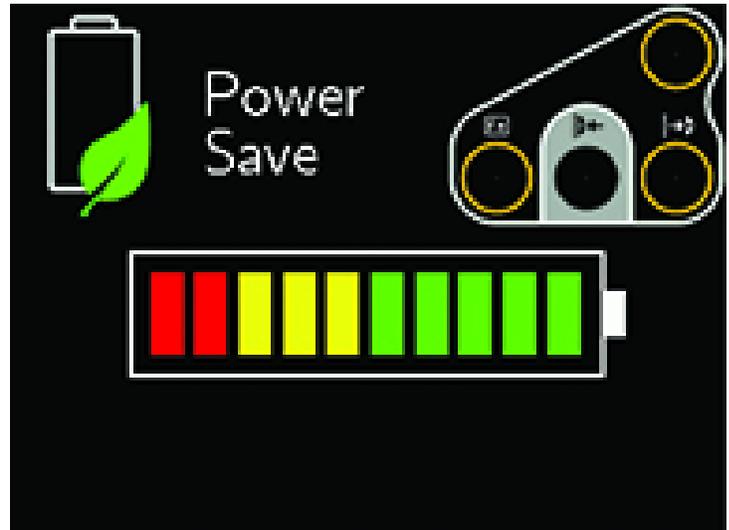

1..... If the lifter remains in “Power Save” mode for a long time, the pump will run periodically to test the battery.

2..... If the battery charger is connected to an AC power source, the reading on the battery gauge will not be accurate and “Replace 12V battery” may appear on the LCD screen, because the system cannot accurately evaluate the battery.

# OPERATION

## Preparing to Use the Remote Control System

The radio transmitter enables you to activate powered functions at distances up to 250' [76 m], provided you have a clear and direct view of the lifter and its indicators. These functions include:<sup>1</sup>

- attaching and releasing vacuum pads
- releasing the rotation latch
- tilting the load
- extending and retracting counterweight (if the lifter has the integrated counter-balancer)

When you are operating the lifter remotely, follow these safety rules:

- Visually verify the status of the lifter and load before lifting.



***Make sure nearby personnel are aware of intended remote control actions.***

- Monitor the lifter at all times to make sure it is functioning as intended.<sup>2</sup>
- Be sure the load is landed and supported correctly before releasing it (see following sections).

When you hold any button on the transmitter, the transmission indicator light flashes green if the transmitter is activated.



- 1 EMERGENCY DISCONNECT BUTTON
- 2 TRANSMISSION INDICATOR LIGHT
- 3 "ATTACH" BUTTON
- 4 "RELEASE" BUTTON
- 5 ROTATION LATCH RELEASE BUTTONS
- 6 TILT UP BUTTON
- 7 TILT DOWN BUTTON
- 8 RETRACT COUNTERWEIGHT BUTTON
- 9 EXTEND COUNTERWEIGHTBUTTON
- 10 POWER / "FUNCTION" BUTTON

1..... If the radio transmitter does not work, these functions can be controlled using the Intelli-Grip® control unit (see INTELLI-GRIP® OPERATOR MENUS in [SERVICE MANUAL](#)).

2..... The Remote Control System is designed to prevent multiple lifters from responding. Nevertheless, radio controlled lifters should be tested to make sure each transmitter controls only one lifter.

# OPERATION

1A



1B



To prevent unintentional transmissions, press the emergency disconnect button (figs. 1A-B and inset) after the lifter completes a transmitted function. Reset it when you are ready to use the transmitter again.<sup>1</sup>

1..... To reset the emergency disconnect button, twist it clockwise and allow it to spring outward to its original position.

## TO PREPARE FOR LIFTING

### Powering up the Lifter

Press the lifter's power button (☰ — fig. 1A). The vacuum pumps will run for a few seconds, as a normal function of the Intelli-Grip® self-diagnostics.

The lifter automatically tests the 9V battery for the notification buzzer each time the lifter is powered up. When this battery runs down, the LCD screen displays “Replace 9V battery?” and the buzzer chirps once per minute. Replace the battery as needed (see “[NOTIFICATION BUZZER BATTERY REPLACEMENT](#)”).



To use the Remote Control System, hold the power button (☰ — fig. 1B) briefly to activate the radio transmitter.<sup>1</sup>

### Setting the Lifter Weight

*Note: If the lifter weight is not set accurately, the “release” function may not work correctly (see “[Releasing the Pads from the Load](#)”).*



**Lifter weight must be set accurately for correct lifter operation.**

After you power up a lifter, the LCD screen automatically displays the Confirm Settings menu, which shows the “Total Weight” measured by the load sensor and any previously “Set Lifter Weight”.<sup>2</sup>

The current settings may be accepted if they are known to be accurate. However, if you make any change to the pad frame configuration or the number of counterweight plates mounted on the optional integrated counter-balancer, you must update the lifter weight.

1..... The radio transmitter turns off automatically, after a period of inactivity.

2..... The “Load Scale Enabled?” setting is set to “Yes” by default. To disable it for troubleshooting, refer to INTELLI-GRIP® OPERATOR MENUS in [SERVICE MANUAL](#).

# OPERATION

To update the lifter weight ...

- 1) Use the hoisting equipment to raise the unloaded lifter, allowing it to hang freely.
- 2) Power up the lifter.
- 3) The LCD screen will automatically display the Confirm Settings menu, showing the total weight of the lifter, the integrated counter-balancer and any installed counterweight, when so equipped.
- 4) Select "Set Lifter Weight", to automatically update the lifter weight to the currently measured total weight. Then press the "function" button (Fn).
- 5) Select "Exit Menu" and press the "function" button (Fn).




The screenshot shows a black LCD screen with white text. The title is "Confirm Settings". Below it are three rows: "Load Scale Enabled?" with "[Yes]" to its right, "Total Weight" with "555 lbs" to its right, and "Set Lifter Weight" with "555 lbs" to its right. Below these is a dark grey bar with "Exit Menu" in white. At the bottom, there is a blue bar with a battery icon on the left and "100%" on the right.

Confirm Settings	
Load Scale Enabled?	[Yes]
Total Weight	555 lbs
Set Lifter Weight	555 lbs
Exit Menu	
100%	

Alternatively, you can update lifter weight *after* a suspended, unloaded lifter has been powered up:

- 1) From the main Operator Menu, select "Lifter Settings".
- 2) In the Lifter Settings menu, select "Load Scale."
- 3) Select "Set Lifter Weight", to automatically update the lifter weight to the currently measured total weight. Then press the "function" button (Fn).
- 4) Select "Exit Menu" and press the "function" button (Fn).

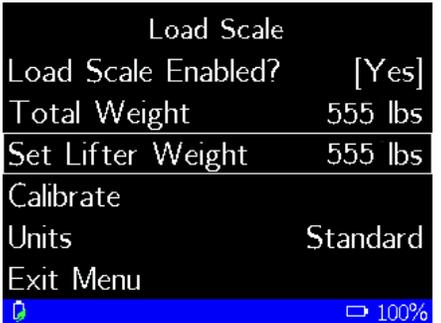

The screenshot shows a black LCD screen with white text. The title is "Load Scale". Below it are four rows: "Load Scale Enabled?" with "[Yes]" to its right, "Total Weight" with "555 lbs" to its right, "Set Lifter Weight" with "555 lbs" to its right, and "Calibrate Units" with "Standard" to its right. Below these is a dark grey bar with "Exit Menu" in white. At the bottom, there is a blue bar with a battery icon on the left and "100%" on the right.

Load Scale	
Load Scale Enabled?	[Yes]
Total Weight	555 lbs
Set Lifter Weight	555 lbs
Calibrate Units	Standard
Exit Menu	
100%	

*Note: To access a complete list of lifter settings or other Intelli-Grip® menus, refer to the INTELLI-GRIP® OPERATOR MENUS section of the [SERVICE MANUAL](#).*

# OPERATION

## TO ATTACH THE PADS TO A LOAD

Make sure the contact surfaces of the load and vacuum pads are clean (fig. 1A — see “[Pad Cleaning](#)”).

1A




## Positioning the Lifter on the Load

- 1) Center the pad frame on the load (fig. 1B).<sup>1</sup>
- 2) If applicable, tilt the pad frame to match the angle of the load (see “[TO TILT THE LOAD](#)”).
- 3) Make sure all vacuum pads will fit on the load and will be loaded evenly.



Consult the Per-Pad Load Capacity.

- 4) Place the vacuum pads in contact with the load surface.

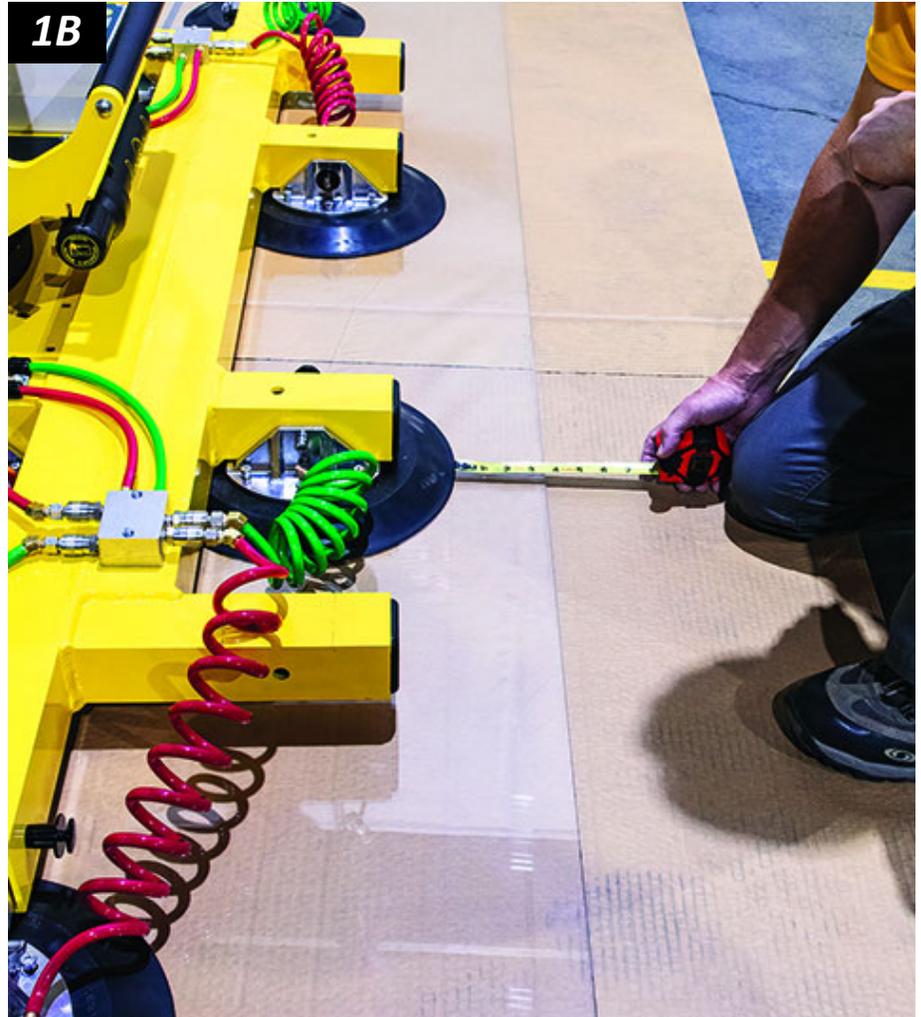

1..... The lifter is designed to handle the maximum load weight when the load's center of gravity is positioned within 2" [5 cm] of the lifter's rotation axis.

# OPERATION

## Sealing the Pads on the Load

Press the “attach” button (→| — fig. 1A) on the radio transmitter or the lifter.

 **Keep “attach” function activated throughout lift.**

The vacuum pumps will run until the vacuum pads seal completely. If the lifter takes too long to attach, the notification buzzer chirps and the LCD screen displays “Vacuum not increasing normally”, along with a diagnostic code (see “[INTELLI-GRIP® DIAGNOSTIC CODES](#)”). In this case, press the lifter firmly against the load to help the pads begin to seal (fig. 2A).<sup>1, 2</sup>



## Reading the Vacuum Gauges

The 2 vacuum gauges of the dual vacuum system show the current vacuum level in positive inches of Hg and negative kPa:

- *Green* range ( $\geq 16$ " Hg [ $\leq -54$  kPa]): Vacuum level is sufficient to lift the maximum load weight (fig. 1B).
- *Red* range ( $< 16$ " Hg [ $> -54$  kPa]): Vacuum level is **not** sufficient to lift the maximum load weight (fig. 2B).<sup>3</sup>

If it takes more than 5 seconds for the vacuum level to reach 5" Hg [-17 kPa] on either vacuum gauge, press on any vacuum pad that has not yet sealed. Once the pads have sealed, the lifter should be able to maintain sufficient vacuum for lifting, except when used above the maximum Operating Elevation.<sup>4</sup> If it does not, perform the “[Vacuum Test](#)”.



1..... Although a vacuum pad may become distorted during shipping or storage, this condition should correct itself with continued use.

2..... If the lifter does not attach easily, make sure the inside 8 pads attach first. Then press on the outer pads.


3..... The gauge face colors do not correspond with the circuit colors.

4..... If the lifter is used above the maximum Operating Elevation (see “[SPECIFICATIONS](#)”), it may not be able to maintain sufficient vacuum for lifting. Contact WPG for more information.

# OPERATION

## To Lift and Move the Load

 **Lift bar must be vertical to lift load.**

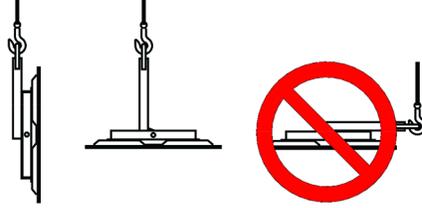

## Interpreting the Lift Light



When the lifter attains the vacuum level required for lifting, the green vacuum lift light (fig. 1A) turns *on* automatically and the vacuum pumps turns *off* temporarily, to conserve 12V battery energy.

 **Never lift load unless lift light is illuminated, because premature lifting could result in load release and personal injury.**



## Interpreting the Load Sensor

As the lifter begins lifting, the load sensor (see arrow in fig. 1B) measures the weight suspended from the adjustable lift point. The LCD screen displays the previously set lifter weight (⌘ in fig. 2B) and the load weight (△ in fig. 2B).

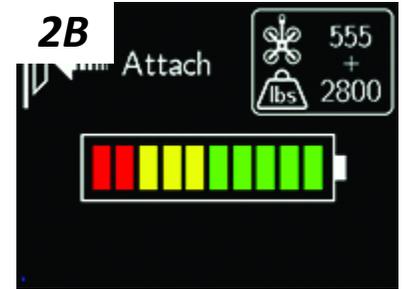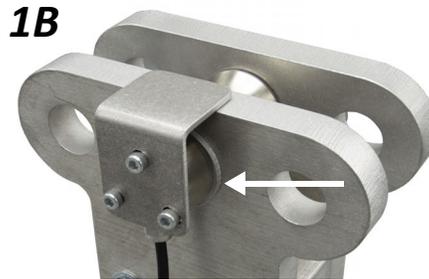

*Note: The load weight will only be accurate when the lifter weight has been set correctly (see “Setting the Lifter Weight”).*

## Monitoring Vacuum Indicators

Monitor the vacuum lift light and both vacuum gauges throughout the entire lift (fig. 1C).

 **Make sure all vacuum indicators remain completely visible.**



# OPERATION

The vacuum pumps turn on and off to overcome any leakage. However, if the leak rate is greater than normal, the notification buzzer chirps and the LCD screen displays “Vacuum decrease on circuit #”, along with a diagnostic code (see “[INTELLI-GRIP® DIAGNOSTIC CODES](#)”).<sup>1</sup> Such leaks can cause the 12V battery to be discharged more quickly.

**If vacuum pumps are unable to overcome leakage**, the notification buzzer sounds continuously, the lift light turns off, and the LCD screen displays “INSUFFICIENT VACUUM!”, along with a diagnostic code (see “[INTELLI-GRIP® DIAGNOSTIC CODES](#)”). If this happens:

- 1) Keep everyone away from a suspended load until it can be safely lowered to a stable support.



**Stay clear of any suspended load while indicators warn of low vacuum.**

- 2) Stop using the lifter until the cause of the vacuum loss is identified: Conduct the “[Pad Inspection](#)” and perform the “[Vacuum Test](#)”.
- 3) Correct any faults before resuming normal operation of the lifter.

## Controlling the Lifter and Load

When the lifter is ready, use the hoisting equipment to raise the lifter and load as needed.

Use a control handle (fig. 1A) to keep the lifter and load in the required position.

Once there is enough clearance, you may reposition the load as required.



## In Case of a Power Failure

In the event of 12V battery failure or electrical system failure, the notification buzzer sounds continuously.

Although the vacuum reserve tanks are designed to support the load for at least 5 minutes without power, this depends on many factors, including the “[LOAD CHARACTERISTICS](#)” and the condition of vacuum pads (see “[VACUUM PAD MAINTENANCE](#)”).

If a power failure occurs, keep everyone away from a suspended load until it can be lowered safely to a stable support. Correct any faults before resuming normal operation of the lifter.



**Stay clear of any suspended load during power failure.**

1..... Automatic leak detection is **not** a substitute for performing the “[Vacuum Test](#)”, as required by the “[INSPECTION SCHEDULE](#)” and “[TESTING](#)”. Sensitivity of the leak detection can be adjusted (see INTELLI-GRIP® OPERATOR MENU in [SERVICE MANUAL](#)).

# OPERATION

## TO USE THE EMERGENCY STOP BUTTON

If necessary, press the emergency stop button (fig. 1A-B) on the lifter to immediately stop the following functions:

- Disengaging the rotation latch
- Tilting the pad frame
- Extending or retracting counterweight (if the lifter has the integrated counter-balancer)

*Note: Pushing the emergency stop button will **not** stop the vacuum generating system from functioning.*


Once the button is pressed, any attempt to use the motion controls will be prevented and the LCD screen will display a message indicating the stop button is engaged.

To reset the stop button, twist the button clockwise and allow it to spring outward to its original position.



# OPERATION

## To ROTATE THE LOAD

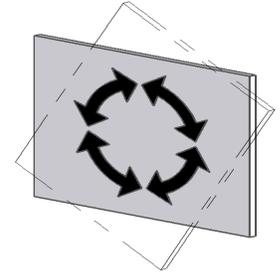

**Make sure load is positioned correctly on lifter (as previously directed).**



**Keep hands and fingers away from pinch points between pad frame and lift bar.**

- 1) Make sure the load has enough clearance to rotate without contacting anyone or anything.
- 2) Keep the load under control at all times, using control lines, hand cups or other appropriate means.



**Unbalanced loads may rotate unexpectedly when latch is disengaged.**

- 3) Hold BOTH rotation latch release buttons on the radio transmitter (📻) — fig. 3A inset) to disengage the rotation latch, and rotate the load as required (fig. 3A).

*Note: An unbalanced load may prevent the rotation latch from disengaging. In this case, relieve pressure on the latch by applying force to the pad frame as needed.*

- 4) To stop load motion, let go of the rotation latch release buttons and guide the load to the next appropriate stop.

*Note: Whenever rotation is not required, keep the rotation latch engaged, to prevent load damage or personal injury.*




# OPERATION

## TO TILT THE LOAD



**Make sure load is positioned correctly on lifter (as previously directed).**

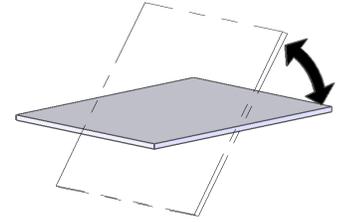

**Caution:** Unbalanced loads can interfere with the lifter's tilt capability, and they can also damage the lifter.

1) Make sure the load has enough clearance to tilt without contacting anyone or anything.

2) Hold the tilt up button (↖ — fig. 2A) or the tilt down button (↗ — fig. 2B) on the radio transmitter, whichever corresponds with the desired tilt direction.

2A




2B



3) To stop load motion in the desired position, simply let go of the tilt button.

*Note: See "LOAD CHARACTERISTICS" about allowable load overhang.*

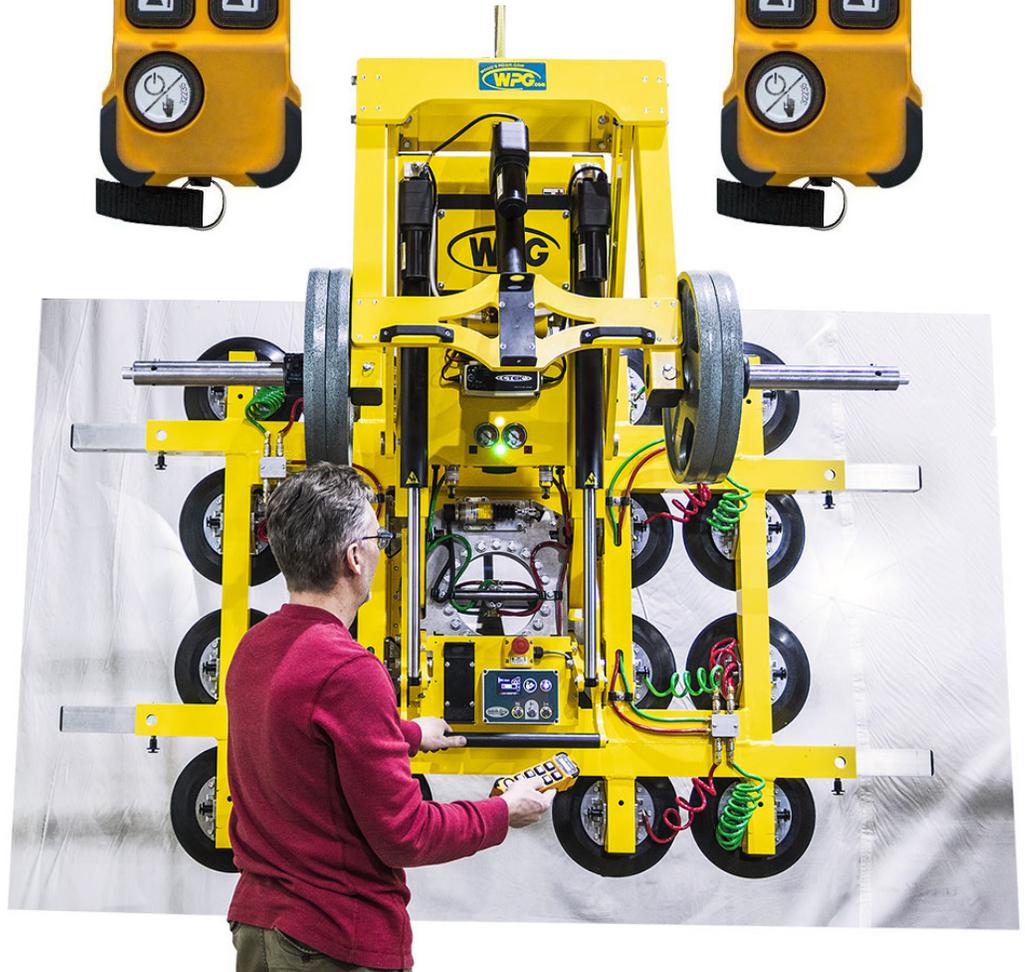

# OPERATION

## TO USE THE INTEGRATED COUNTER-BALANCER



If the lifter is equipped with the optional integrated counter-balancer, use counterweight to offset load weight for the intended task:

- 1) Make sure there is enough clearance to move the counterweight as needed (note dimensions shown in fig. 1A).

 **Keep hands and fingers away from pinch points on counter-balancer.**

 **Do not allow people to be positioned under counter-balancer or within its range of motion.**

- 2) Once the load is lifted, hold the extend counterweight button (fig. 2A) on the radio transmitter to move the counterweight outward, or hold the retract counterweight button (fig. 2B) to move the counterweight inward, as needed to obtain the optimal hang angle.

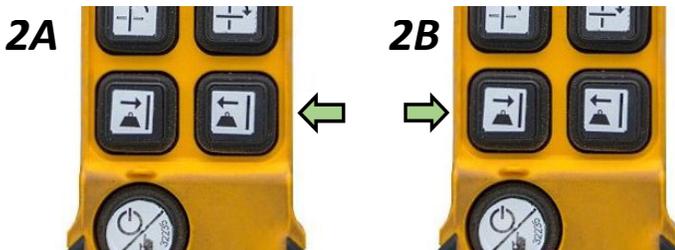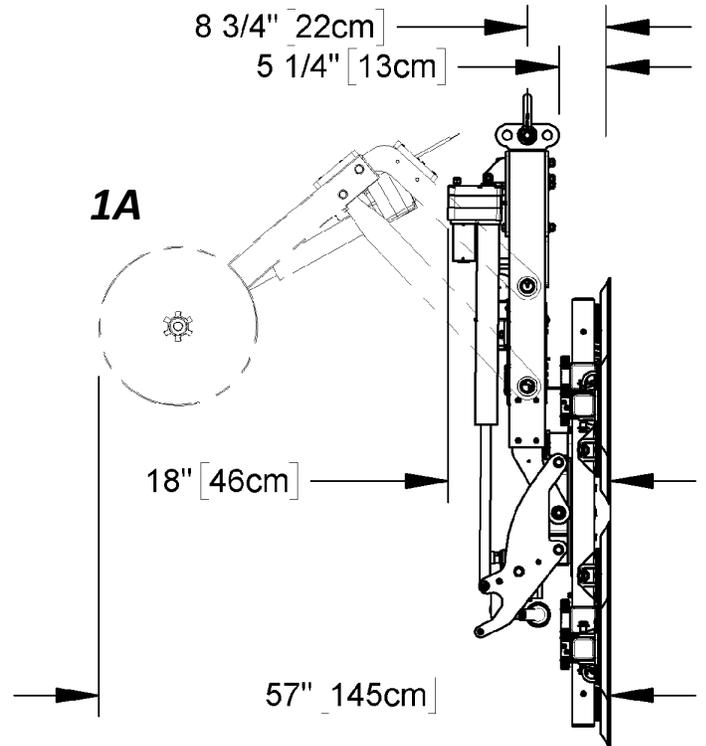

# OPERATION

## TO PREPARE THE LIFTER FOR USE WITH A CB3 COUNTER-BALANCER

**Caution:** Do not attempt to use the Intelli-Grip® control unit to control any motion or other function of a paired CB3DC counter-balancer.

If you choose to pair this lifter with a CB3 counter-balancer from WPG instead of using the optional integrated counter-balancer, perform these steps beforehand:


- 1) As you power up the lifter, verify the lifter is equipped with Intelli-Grip® 7.8 or later by viewing the splash screen on the control unit (fig. 1A).

*Note:* Your lifter's software can be updated using the WPG Intelli-Grip App; watch the video at <https://vimeo.com/showcase/5828517/video/823402063> for instructions.



- 2) Remove all components of the integrated counter-balancer from the lifter (see “[To ASSEMBLE THE INTEGRATED COUNTER-BALANCER](#)” and [35720-IntegratedCounterBalancer](#)).
- 3) Change the “CB Attached?” motion setting from [Yes] to [No] (fig. 3A — see “[To CONTROL POWERED MOTIONS](#)” and “[To CHANGE MOTION SETTINGS](#)” in [SERVICE MANUAL](#)).

*Note:* The *Limit Settings* row shown on this screen applies only to the integrated counter-balancer. Changes to these settings will not affect a paired CB3 counter-balancer.

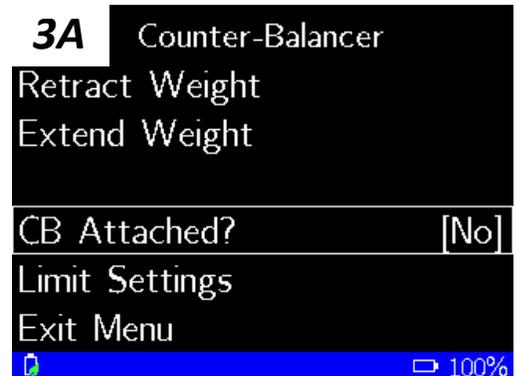

# OPERATION

## TO SET DOWN THE LOAD

### About the Load Sensor and the Load Support Light

The load sensor measures the weight supported by the hoisting equipment and detects whether the load has been set down.<sup>1</sup>

The load support/counter-balancer position light (fig. 1A) will illuminate when weight of the load is supported independently from the hoisting equipment and the counterweight is fully retracted (if the lifter is equipped with the integrated counter-balancer).



If you try to release a load that is **not** supported independently, the notification buzzer sounds continuously, the strobe light flashes and the LCD screen displays “Load not supported”, along with a diagnostic code (see “[INTELLI-GRIP® DIAGNOSTIC CODES](#)”).

If you try to release a load when the counterweight is **not** fully retracted, the notification buzzer sounds continuously, the strobe light flashes and the LCD screen displays “Counterweight not retracted”, along with a diagnostic code (see “[INTELLI-GRIP® DIAGNOSTIC CODES](#)”).

However, you may override these safeguards in appropriate circumstances (see next section).

### Releasing the Pads from the Load

**!** *Make sure load is at rest and fully supported before releasing vacuum pads.*

**!** *If applicable, make sure counterweight is fully retracted before releasing vacuum pads. Otherwise, abrupt and unpredictable motion could occur.*


- 1) Hold the “function” button (  in fig. 1B) and the “release” button (  in fig. 1B) on the radio transmitter. If the vacuum seal does not break, follow the directions on the lifter’s LCD screen. Alternatively, the corresponding buttons on the Intelli-Grip® control unit may be used to complete this action.



1..... The lifter weight must be set correctly for the load sensor to function accurately (see “[Setting the Lifter Weight](#)”).

# OPERATION

Note: The strobe light flashes (fig. 1C) while the “function” button or “release” button is held, to show the operator that signals are being transmitted and to warn others that the operator may be releasing the load.

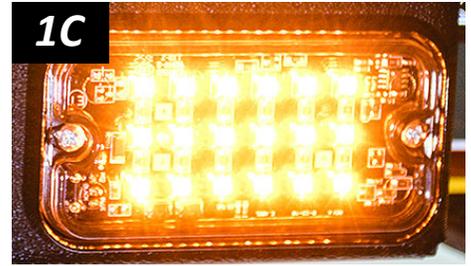

- 2) Continue to hold the “function” and “release” buttons until the vacuum pads release the load completely. Otherwise, the lifter will automatically revert to “attach” mode.<sup>1</sup>



**Do not use hoisting equipment or any powered motion functions until pads release completely, because such movement could result in load damage or personal injury.**

After the load is successfully released, the lifter activates the “Power Save” mode automatically.<sup>2</sup>

- 3) Before you lift another load, perform the Every-Lift Inspection (see “[INSPECTION SCHEDULE](#)”).

Note: If the load is not supported independently or the counterweight is not fully retracted, the load support/counter-balancer position light will not illuminate.

However, **if you are certain that the release will not pose any risk to persons or property**, release the load as follows:



**Make sure overriding load support safeguards will not pose risk to persons or property.**

- 1) Hold the “function” and “release” buttons. The notification buzzer and strobe light will turn on to notify that the release function is being initiated even though the recommended conditions for release are not satisfied.
- 2) Continue to hold the “function” and “release” buttons. The buzzer and strobe light will continue for 30 seconds and then the lifter will start releasing the load.
- 3) Continue to hold both buttons until the vacuum pads release completely.

1..... A “Timed Release” function can be used to help separate the lifter from the load: Hold the “function” and “release” buttons until a yellow arrow appears on the LCD screen. Then tap the “function” button 2 or more times. This prolongs the release mode for 5 seconds per each additional tap.

2..... In the event a load is not separated completely after a release attempt, the lifter will still activate the “Power Save” mode — if it does not detect vacuum in the system.

# OPERATION


## AFTER USING THE LIFTER

- 1) If the lifter is equipped with the optional integrated counter-balancer, make sure the counterweight is fully retracted.



**Caution:** Do not set lifter on surfaces that could soil or damage vacuum pads.

- 2) Move the parking stands to support the lifter:

- 2.1) Remove the cotterless hitch pin and slide a parking stand off the pad frame (figs. 2A-B).

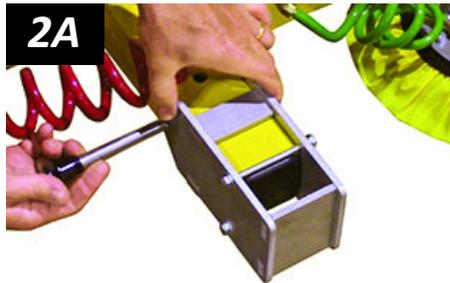

- 2.2) Rotate the parking stand 90° to its functional position, and slide it back onto the pad frame. Then align the hitch pin holes and reinsert the cotterless hitch pin to secure the stand (figs. 2C-D).

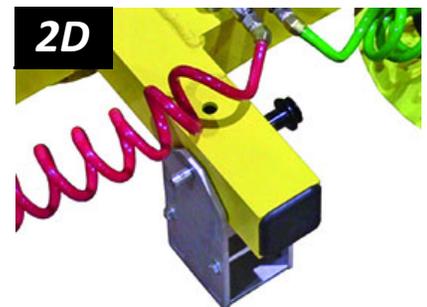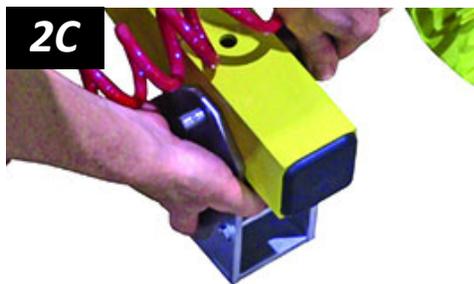

- 2.3) Repeat steps 2.1 and 2.2 to move the other 3 parking stands as described.

- 3) Use the hoisting equipment to gently lower the lifter onto a stable surface. Then detach the hoisting hook from the rigging that connects it to the adjustable lift point.
- 4) Press the emergency disconnect button and place the radio transmitter in its holder.
- 5) Press the “function” button ( **Fn** in fig. 5A) and the power button ( **⏻** in fig. 6A) on the Intelli-Grip® control unit, to power down the lifter.



- 6) Charge the 12V battery after each workday as needed (see “[12-VOLT BATTERY RECHARGE](#)”).

# OPERATION



## Storing the Lifter

- 1) Use the covers supplied (fig. 1A) to keep the vacuum pads clean.



**CE/UKCA** —To prevent the lifter from tipping over on relatively horizontal surfaces, use the parking stands as previously described.

- 2) Charge the 12V battery completely and repeat every 6 months (see “[12-VOLT BATTERY RECHARGE](#)”).
- 3) Disconnect the electrical connectors, to prevent battery discharge (figs. 3A-B).
- 4) Store the lifter in a clean, dry location. Store the battery between 32° and 70° F [0° — 21° C]. Avoid storage above 100° F [38° C].

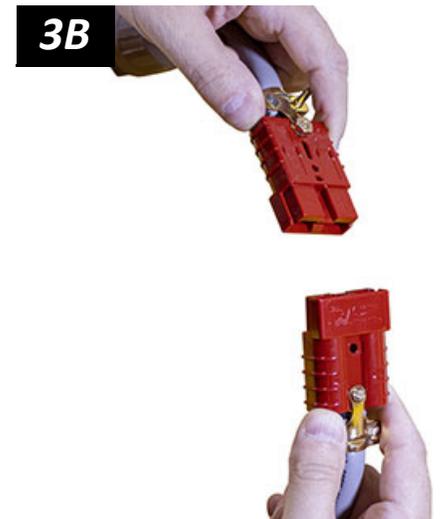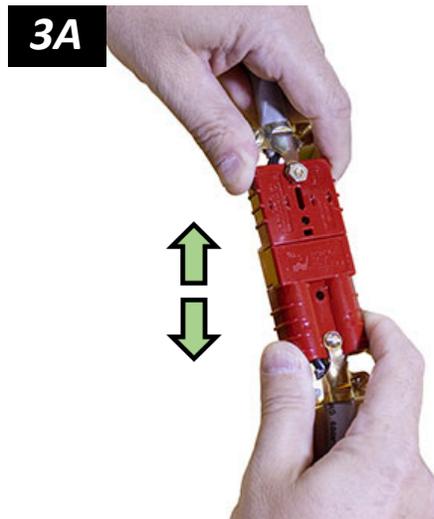

## Transporting the Lifter

- 1) Reverse the “ASSEMBLY” steps, to disassemble the lifter (and the integrated counter-balancer, when so equipped).
- 2) Secure the lifter (and the integrated counter-balancer, when so equipped) in the original shipping container with the original shipping materials or equivalent.

**Caution:** Make sure lift bar is supported as needed to prevent damage.

# INSPECTIONS AND TESTS

## INSPECTION SCHEDULE

Perform inspections according to the following frequency schedule. If any fault is found, correct it and perform the next most frequent inspection before using the vacuum lifter.

*Note: If a lifter is used less than 1 day in a 2-week period, perform the Periodic Inspection before using it.*

Action	Every Lift	Frequent <sup>1</sup> <small>(Every 20-40 hrs.)</small>	Periodic <sup>2</sup> <small>(Every 250-400 hrs.)</small>
Examine <u>vacuum pads</u> for contaminants or damage (see “ <a href="#">Pad Inspection</a> ”).	✓	✓	✓
Examine load surface for contaminants or debris.	✓	✓	✓
Examine controls and indicators for damage.	✓	✓	✓
Examine lifter’s structure for damage.		✓	✓
Examine vacuum system for damage (including <u>vacuum pads</u> , fittings and hoses).		✓	✓
Examine <u>air filters</u> for conditions requiring service (see “AIR FILTER MAINTENANCE” in <a href="#">SERVICE MANUAL</a> ).		✓	✓
Perform “ <a href="#">Vacuum Test</a> ”.		✓	✓
Check for unusual vibrations or noises while operating lifter.		✓	✓
 If the lifter has a Remote Control System, perform “ <a href="#">Remote Control System Test</a> ”.		✓	✓
Examine entire lifter for evidence of: <ul style="list-style-type: none"> <li>• looseness, excessive wear or excessive corrosion</li> <li>• deformation, cracks, dents to structural or functional components</li> <li>• cuts in vacuum pads or hoses</li> <li>• any other hazardous conditions</li> </ul>			✓
Inspect entire electrical system for damage, wear or contamination that could be hazardous, in compliance with all local codes and regulatory standards. <b>Caution:</b> Use appropriate cleaning methods for each electrical part, as specified by codes and standards. Improper cleaning can damage parts.			✓

1..... The Frequent Inspection is also required whenever the lifter has been out of service for 1 month or more.

2..... The Periodic Inspection is also required whenever the lifter has been out of service for 1 year or more. Keep a written record of all Periodic Inspections. If necessary, return the lifter to WPG or an authorized dealer for repair (see “[REGISTRATION AND LIMITED WARRANTY](#)”).

## TESTING

Perform the following test to determine whether or not a load surface is too porous or rough:

### Lifter/Load Compatibility Test<sup>1</sup>

- 1) Make sure the vacuum generating system is functioning correctly (see “[Vacuum Test](#)”).
- 2) Thoroughly clean the load surface and the vacuum pads (see “[Pad Cleaning](#)”).<sup>2</sup>
- 3) Place the load in the upright position on a stable support.
- 4) Attach the vacuum pads to the load as previously directed.
- 5) After the vacuum pump stops running, hold the “function” button (**(Fn)**) and the “power” button (**(⏻)**) for at least 5 seconds to power down the vacuum lifter.

*Note: During this time the LCD screen displays “WARNING! Is load attached?”, the notification buzzer chirps rapidly and the strobe light flashes.*

- 6) Raise the load a minimal distance, to make sure it is supported by the lifter.
- 7) Watch each vacuum gauge: **Starting from a vacuum level of 16" Hg [-54 kPa], the lifter must maintain a vacuum level greater than 12" Hg [less than -41 kPa] for 5 minutes.**<sup>3</sup> If not, lifting this load requires additional precautions (eg, a load sling). Contact WPG for more information.
- 8) Lower the load *after* 5 minutes or *before* the vacuum level diminishes to 12" Hg [increases to -41 kPa].



**Take precautions in case load should fall during test.**

1..... The “[Pad-to-Load Friction Coefficient](#)” can affect the outcome of this test.

2..... Contaminated loads can also cause the vacuum pump to run frequently or continuously. Since excessive pumping quickly reduces 12V battery energy, clean the load whenever possible.

3..... Under CE and UKCA requirements, the lifter must maintain a vacuum level **greater than 8" Hg [less than -27 kPa]**.

# INSPECTIONS AND TESTS

Perform the following tests before placing the lifter in service *initially* and *following any repair*, when directed in the “*INSPECTION SCHEDULE*”, or *whenever necessary*:

## Operational Tests

Test all features and functions of the lifter (see “OPERATING FEATURES” and “OPERATION”).

## Vacuum Test

- 1) Clean the face of each vacuum pad (see “*Pad Cleaning*”).
- 2) Use a test load with weight equal to the Maximum Load Capacity, a clean, smooth, nonporous surface and other appropriate “*LOAD CHARACTERISTICS*”.<sup>1</sup> 
- 3) Attach the lifter to the test load as previously directed. After the vacuum pump stops running, the vacuum level should appear in the green range on each of the vacuum gauges.
- 4) Raise the load a minimal distance. Then hold the “function” button (Fn) and the “power” button (⏻) for at least 5 seconds to power down the lifter.<sup>2</sup>

 **Take precautions in case load should fall during test.**
- 5) Watch the vacuum gauges: *The vacuum level should not decrease by more than 4" Hg [increase by more than 14 kPa] in 5 minutes.*
- 6) Lower the load after 5 minutes or whenever a lifter fails the test, and release the load as previously directed. 

 **Never use lifter that has failed test.**
- 7) Qualified service personnel must correct any fault in the vacuum system before the lifter can be returned to service. 

 **This service must be performed by qualified service personnel.**

1..... The load should have either a flat surface or no more curvature than the lifter is designed for, if any.

2..... During this time, the LCD screen displays “WARNING: Is load attached?”, the notification buzzer chirps and the strobe light flashes.

# INSPECTIONS AND TESTS

## Rated Load Test<sup>1</sup>

The following steps must be performed or supervised by a qualified person:<sup>2</sup>

- 1) Use a test load that weighs 125% ( $\pm 5\%$ ) of the Maximum Load Capacity and has the appropriate “LOAD CHARACTERISTICS”. 
- 2) Attach the vacuum pads to the load as previously directed.
- 3) Position the load to produce the greatest stress on the lifter consistent with “INTENDED USE”.
- 4) Raise the load a minimal distance and leave it suspended for 2 minutes.
- 5) Once the test is completed, lower and release the load as previously directed.
- 6) Inspect the lifter for any stress damage, and repair or replace components as necessary to successfully pass the test.
- 7) Prepare a written report of the test and keep it on file.



**Take precautions in case load should fall during test.**



**Never use lifter that has failed test.**

## Remote Control System Test

 If the lifter has a Remote Control System, test it where the lifter is normally used. Use the radio transmitter to activate each of the remote functions.<sup>3</sup> Vary the transmitter's direction and distance from the lifter, to make sure transmissions are effective.<sup>4</sup>

If the Remote Control System is not functioning correctly, ...

- the 9V battery for the radio transmitter may need to be replaced, or;
- metal or other electrically conductive surfaces may be causing radio interference. Reposition the transmitter to transmit signals effectively.

If the problem persists, vary the test conditions, to determine whether there is transmission interference in the work environment or the Remote Control System is not functioning. Correct any fault before using the Remote Control System.

1..... An equivalent simulation may also be used. Contact WPG for more information.

2..... A “qualified person” has successfully demonstrated the ability to solve problems relating to the subject matter and work, either by possessing a recognized degree in an applicable field or a certificate of professional standing, or by possessing extensive knowledge, training and experience.

3..... Use a test material with appropriate “LOAD CHARACTERISTICS” to test the “attach” and “release” functions.

4..... This may require assistance from someone near the lifter, to verify functions are working as intended.

# MAINTENANCE

Note: Refer to **SERVICE MANUAL #36108** when applicable.

## VACUUM PAD MAINTENANCE

### Pad-to-Load Friction Coefficient

The friction coefficient represents the lifter's ability to resist load slippage. The Maximum Load Capacity is based on a friction coefficient of 1, as determined by testing of clean, new, standard rubber vacuum pads on clean, dry, regular glass. **If the lifter is used under any other conditions, a qualified person must first determine the effective lifting capacity.**<sup>1</sup>



Long-term exposure to heat, chemicals or UV light can damage vacuum pads. Replace pads every 2 years or more often when necessary.

### Pad Inspection


Inspect each vacuum pad (fig. 1A) according to the “**INSPECTION SCHEDULE**” and correct the following faults before using the lifter (see “**REPLACEMENT PARTS**”, when applicable):

- Contaminants on the face (item 1 in fig. 1A) or sealing edges (item 2 in fig. 1A).
- Filter screen (item 3 in fig. 1A) missing from face.



**Replace any pad that has damaged sealing edges.**

- Nicks, cuts, deformation or abrasions in sealing edges.
- Wear, stiffness or glaze.

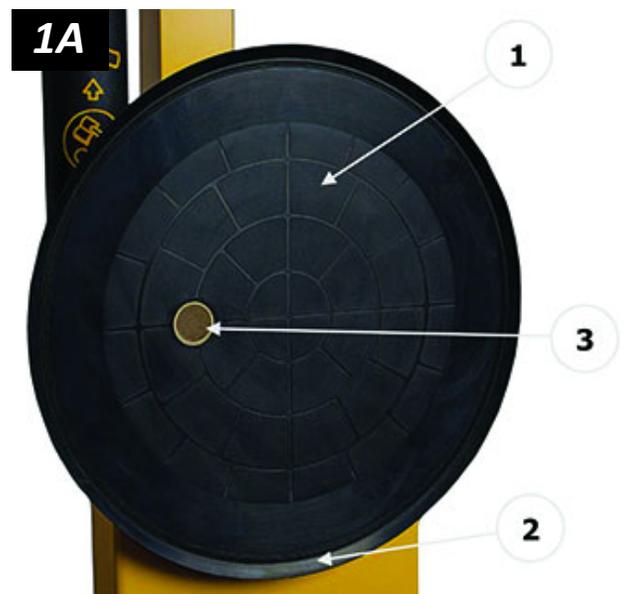

1..... A “qualified person” has successfully demonstrated the ability to solve problems relating to the subject matter and work, either by possessing a recognized degree in an applicable field or a certificate of professional standing, or by possessing extensive knowledge, training and experience.

## Pad Cleaning

- 1) Regularly clean the face of each vacuum pad (fig. 1A), using soapy water or other mild cleansers to remove oil, dust and other contaminants.



***Never use harsh chemicals on vacuum pad.***

Solvents, petroleum-based products (including kerosene, gasoline and diesel fuel) or other harsh chemicals can damage vacuum pads.



***Never use rubber conditioners on vacuum pad.***

Many rubber conditioners can leave a hazardous film on vacuum pads.

- 2) Prevent liquid from entering the vacuum system through the suction hole on the pad face.
- 3) Wipe each pad face clean, using a clean sponge or lint-free cloth to apply the cleanser.<sup>1</sup>
- 4) Allow each pad to dry completely before using the lifter.

1A



<sup>1</sup>..... A brush with bristles *that do not harm rubber* can help remove contaminants clinging to sealing edges. If these cleaning methods are not successful, contact WPG or an authorized dealer for assistance.

# MAINTENANCE

## 12-VOLT BATTERY RECHARGE<sup>1</sup>

Charge the 12V battery whenever the battery gauge shows reduced energy.<sup>2</sup> **Caution:** Make sure the *lifter is powered down*.

Identify the input voltage marked on the battery charger and plug it in to an appropriate power source.<sup>3</sup>




**Make sure power source has ground fault circuit interrupter.**

Press the “MODE” button to select “NORMAL” mode. Lights 1-4 indicate the charging level attained.<sup>4</sup> When the battery is fully charged, light 4 (green) turns on and the charger switches to maintenance mode.

The battery should take no more than 8 hours to charge completely.<sup>5</sup> After reaching level 3, the charger analyzes the battery condition. If the battery needs to be replaced, the charger's red error light (!) turns on (see “REPLACEMENT PARTS”).

Before you return the lifter to service, recheck the battery as previously directed.

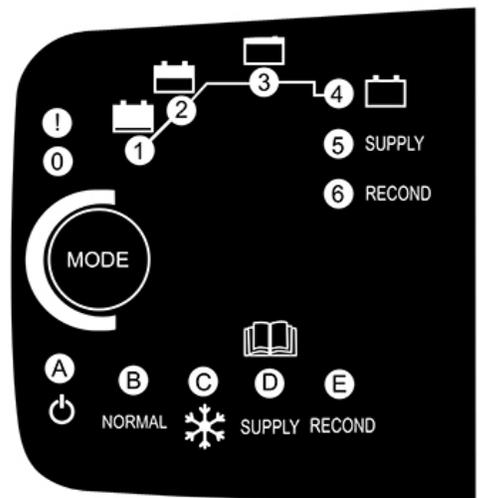


- 1..... You may use a battery charger other than the one supplied, provided it is designed for 12-volt DC, AGM type, lead-acid batteries. Disconnect the battery from the vacuum generating system before charging.
- 2..... To maximize the battery's lifespan, charge it promptly after each use.
- 3..... Any external power supply must conform to all applicable local codes. The lifter is not intended for use while the charger is connected to AC power.
- 4..... If none of the charging level lights turns on, the battery connection or the battery itself may be faulty. If the red error light (!) turns on immediately, the battery leads may be reversed or the charger terminals may be short-circuited; once the problem has been corrected, the charger should function normally. The red error light can indicate other problems, depending on the mode selected and level of charging; if necessary, contact WPG for assistance.
- 5..... The charger automatically reduces the charging rate when the battery is fully charged.

# MAINTENANCE

## NOTIFICATION BUZZER BATTERY REPLACEMENT

- 1) Power down the lifter.
- 2) Release the 9V battery's holder by pressing inward and sideward in the direction marked on the holder.
- 3) Slide the battery tray out (fig. 3A).
- 4) Install a new 9-volt battery according to the polarity markings.
- 5) Slide the battery tray back into position.
- 6) Power up the lifter again, to test the new battery.

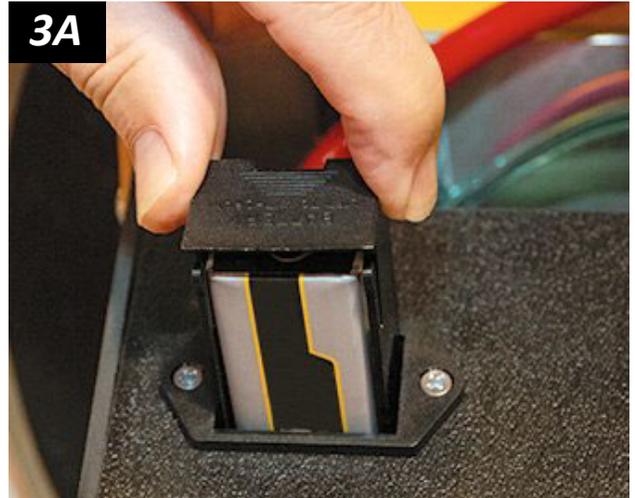

# ← MAINTENANCE →

## INTELLI-GRIP® DIAGNOSTIC CODES

Refer to the following table when a diagnostic code appears on the LCD screen. Codes are listed in alphanumeric order.

*Note: If the Explanations/Directions do not resolve the issue, contact qualified service personnel.*

All relevant parts are listed under “REPLACEMENT PARTS” in these *OPERATING INSTRUCTIONS* or corresponding *SERVICE MANUAL*.

Key:  = buzzer sounds     = buzzer sounds continuously     = strobe light flashes

Code	On-Screen Message	Buzzer Pattern	Strobe Light Activity	Explanations/Directions
B00	“Low 12V Battery (#)”	1 chirp every 2 seconds	(none)	<b>Condition:</b> <u>Battery gauge</u> displays 0% energy. <b>Solution:</b> Charge <u>12V battery</u> completely (see “ <a href="#">12-VOLT BATTERY RECHARGE</a> ”). Otherwise, perform diagnostics as directed for Code B02.
B01	“Lockout (insufficient power) (#)”	continuous	(none)	<b>Condition:</b> Insufficient energy in <u>12V battery</u> is preventing “attach” and “release” functions from working. <b>Solution:</b> Charge battery completely (see “ <a href="#">12-VOLT BATTERY RECHARGE</a> ”).
B02	“Voltage test failed”	1 chirp per minute	(none)	<b>Condition:</b> Lifter failed voltage test when powered up. <b>Solution:</b> Perform the following diagnostics: <ul style="list-style-type: none"> <li>• Is <u>battery charger</u> connected to AC power source? If so, power down lifter, disconnect charger from power source and power up again.</li> <li>• Does <u>battery gauge</u> show diminished energy? If so, charge <u>12V battery</u> completely (see “<a href="#">12-VOLT BATTERY RECHARGE</a>”).</li> </ul> <p><i>Note: Replace battery when indicated by battery charger.</i></p> <ul style="list-style-type: none"> <li>• Is battery cold? (See Operating Temperatures in “SPECIFICATIONS.”) If so, power down lifter, warm battery and power up again.</li> </ul>
B03	“Charge 12V battery soon”	1 chirp per minute	(none)	<b>Condition:</b> <u>12V battery</u> has ≤ 20% energy remaining. <b>Solution:</b> Charge battery completely (see “ <a href="#">12-VOLT BATTERY RECHARGE</a> ”).
B09	“Replace 9V battery?”	1 chirp per minute	(none)	<b>Condition:</b> <u>9V battery</u> for <u>notification buzzer</u> is expended or missing. <b>Solution:</b> Replace battery (see “ <a href="#">NOTIFICATION BUZZER BATTERY REPLACEMENT</a> ”).
C00	“Fail-safe activated”	continuous	on	<b>Condition:</b> Fail-safe mode has been activated, to prevent potential injury. <b>Solution:</b> Service is required.

# MAINTENANCE

Code	On-Screen Message	Buzzer Pattern	Strobe Light Activity	Explanations/Directions
C011	"Communication failure, module 1"	fast chirp	(none)	<b>Condition:</b> Failure detected between <u>Intelli-Grip® control unit</u> and modular circuit board. <b>Solution:</b> Service is required.
C021 C031	"Internal error, module 1"	continuous	(none)	<b>Condition:</b> Fault detected in modular circuit board. <b>Solution:</b> Service is required.
E00 E01 E02 E03 E04	"EEPROM error, cell #"	occasional chirp	(none)	<b>Condition:</b> Failure detected in memory hardware. <b>Solution:</b> Service is required.
I000	"I2C error (#)"	single chirp	(none)	<b>Condition:</b> Communication error detected within control system. <b>Solution:</b> Power down lifter and power up again.
L00	"Load sensor error"	(none)	(none)	<b>Condition:</b> Load sensor malfunction detected. <b>Solution:</b> Service is required.
M01	"Motion limit reached"	single chirp	(none)	<b>Condition:</b> Motion has reached the limits set. <b>Solution:</b> <i>None required.</i>
M02	"Motion setting saved"	single chirp	(none)	<b>Condition:</b> Motion setting will be retained in memory until reset. <b>Solution:</b> <i>None required.</i>
M03	"Motion paused while pump runs"	1 chirp per button press	(none)	<b>Condition:</b> <u>12V battery</u> energy is insufficient to power both <u>vacuum pump</u> and powered motion at the same time. <b>Solution:</b> Charge battery completely (see " <u>12-VOLT BATTERY RECHARGE</u> "). <i>Note: Replace battery when indicated by <u>battery charger</u>.</i>
M04	"Let go of buttons and try again"	(none)	(none)	<b>Condition:</b> Incorrect combination of buttons was used in attempt to use powered motion. <b>Solution:</b> Release all buttons and try again.
N00	"Automatic attach"	(none)	(none)	<b>Condition:</b> System activated "attach" mode as precaution because significant vacuum was detected, even though no one initiated "attach" function. <b>Solution:</b> <i>None required.</i> However, when appropriate, qualified service personnel can adjust sensitivity of vacuum detection.
N01	"Automatic attach"	(none)	(none)	<b>Condition:</b> System activated "attach" mode as precaution because load did not release completely. <b>Solution:</b> <i>None required.</i> However, when appropriate, qualified service personnel can adjust sensitivity of vacuum detection.

# ← MAINTENANCE →

Code	On-Screen Message	Buzzer Pattern	Strobe Light Activity	Explanations/Directions
N02	"Automatic attach"	(none)	(none)	<p><b>Condition:</b> System activated "attach" mode as precaution when lifter was powered up, because power was previously lost while load was attached.</p> <p><b>Solution:</b> <i>None required.</i></p>
N03	"Unable to turn module power off"	1 chirp every 2 seconds	(none)	<p><b>Condition:</b> Power to modular circuit board could not be turned off.</p> <p><b>Solution:</b></p> <ul style="list-style-type: none"> <li>a) Remove <u>9V battery</u>.</li> <li>b) Disconnect <u>12V battery</u> from vacuum generating system.</li> <li>c) Charge battery completely (see "<a href="#">12-VOLT BATTERY RECHARGE</a>").</li> <li>d) Reconnect battery and try to power down again.</li> <li>e) If successful, reinstall 9V battery.</li> </ul>
N04	"Failed to turn controls power off"	1 chirp every 2 seconds	(none)	<p><b>Condition:</b> Power to <u>Intelli-Grip® control unit</u> could not be turned off.</p> <p><b>Solution:</b></p> <ul style="list-style-type: none"> <li>a) Remove <u>9V battery</u>.</li> <li>b) Disconnect <u>12V battery</u> from vacuum generating system.</li> <li>c) Charge battery completely (see "<a href="#">12-VOLT BATTERY RECHARGE</a>").</li> <li>d) Reconnect battery and try to power down again.</li> <li>e) If successful, reinstall 9V battery.</li> </ul>
N05	"Unable to turn module power on"	1 chirp every 2 seconds	(none)	<p><b>Condition:</b> Power to modular circuit board could not be turned on.</p> <p><b>Solution:</b></p> <ul style="list-style-type: none"> <li>a) Power down lifter.</li> <li>b) Charge <u>12V battery</u> completely (see "<a href="#">12-VOLT BATTERY RECHARGE</a>").</li> </ul> <p><i>Note: Replace battery when indicated by <u>battery charger</u>.</i></p> <ul style="list-style-type: none"> <li>c) Power up lifter again.</li> </ul>
N07	"Auto power-down disabled"	(none)	(none)	<p><b>Condition:</b> Automatic power-down is prevented.</p> <p><b>Solution:</b> Power down lifter and power up again.</p>
N08	"Powering down in # seconds"	1 chirp per minute	(none)	<p><b>Condition:</b> Lifter will automatically power down in number of seconds shown.</p> <p><b>Solution:</b> <i>None required.</i> Press any button to cancel action.</p>
N10	"App-support hardware fault"	(none)	(none)	<p><b>Condition:</b> Fault is detected in hardware that enables communication with mobile app.</p> <p><b>Solution:</b> Power down lifter and power up again.</p>

# MAINTENANCE

Code	On-Screen Message	Buzzer Pattern	Strobe Light Activity	Explanations/Directions
N13	"Running on back-up battery" (applicable only to AC3 lifters)	1 chirp per minute	(none)	<b>Condition:</b> System activated DC back-up energy because AC supply voltage has been interrupted. <b>Solution:</b> <i>None required.</i> However, AC must be restored as lifter's primary power source as soon as possible.
N11	"Load scale not calibrated"	(none)	(none)	<b>Condition:</b> Load scale is not calibrated, making it unable to function as intended. <b>Solution:</b> When prompted next time lifter is powered up, calibrate load scale as required.
U00	"WARNING! Is load attached?"	fast chirp	on	<b>Condition:</b> Attempt was made to power down lifter while load was still detected. <b>Solution:</b> Lower load onto stable support and release load <i>before</i> powering down.
U01	"Also hold [Fn] to power down"	(none)	(none)	<b>Condition:</b> Only <u>power button</u> was used. <b>Solution:</b> Hold power button AND " <u>function</u> " button at same time to power down lifter.
U02	"Turn off? Let go of buttons"	(none)	(possible)	<b>Condition:</b> Incorrect combination of buttons was used in attempt to power down lifter. <b>Solution:</b> Hold only <u>power button</u> AND " <u>function</u> " button at same time to power down.
U03	"Timed release: # seconds"	1 chirp per button press	on	<b>Condition:</b> Timed release function has been activated for number of seconds shown (see " <a href="#">Releasing the Pads from the Load</a> "). <b>Solution:</b> <i>None required.</i> Press " <u>function</u> " button to cancel action or press " <u>attach</u> " button to override.
U04	"Also hold [Fn] to release"	(none)	(none)	<b>Condition:</b> Only " <u>release</u> " button was used. <b>Solution:</b> Hold "release" button AND " <u>function</u> " button at same time to release load.
U06	"Let go of [Fn] and Release"	(none)	on	<b>Condition:</b> " <u>Function</u> " button or " <u>release</u> " button was used in combination with " <u>attach</u> " button. <b>Solution:</b> Use only "attach" button to attach load.
U08	"Menu not available in Attach"	(none)	(none)	<b>Condition:</b> Attempt to access Operator Menus was made while lifter was attached to a load. <b>Solution:</b> Access Operator Menus when lifter is not attached.
U09	"Counterweight not retracted"	continuous	on	<b>Condition:</b> "Release" function is prevented because counterweight is not positioned correctly. <b>Solution:</b> Reposition counterweight as directed in Counter-Balancer's <i>OPERATING INSTRUCTIONS</i> and try again.
U10	"Use POWER button for Live Stats"	(none)	(none)	<b>Condition:</b> " <u>Function</u> " button was used in apparent attempt to access Live Stats. <b>Solution:</b> Use <u>power button</u> to access Live Stats.
U11	"Testing battery - wait to attach"	(none)	(none)	<b>Condition:</b> "Attach" function is prevented because <u>12V battery test</u> is in progress. <b>Solution:</b> Wait until <u>vacuum pump</u> stops running and try again.

# ← MAINTENANCE →

Code	On-Screen Message	Buzzer Pattern	Strobe Light Activity	Explanations/Directions
U12	E-Stop is pressed	(none)	(none)	<p><b>REQUIRED ACTION:</b> <i>Make sure all personnel are safe and potential danger has been resolved.</i></p> <p><b>Condition:</b> <u>Emergency stop button</u> on lifter has been engaged.</p> <p><b>Solution:</b> Reset button by twisting it clockwise.</p>
U13	E-Stop blocking powered motion	single chirp	(none)	<p><b>REQUIRED ACTION:</b> <i>Make sure all personnel are safe and potential danger has been resolved.</i></p> <p><b>Condition:</b> Powered motion is blocked because <u>emergency stop button</u> on lifter has been engaged.</p> <p><b>Solution:</b> Reset button by twisting it clockwise.</p>
U14	“Load not supported”	continuous	on	<p><b>Condition:</b> “Release” function is prevented because load is still primarily supported by lifter.</p> <p><b>Solution:</b> Make sure there is adequate load support before releasing load.</p>
U15	“Insufficient vacuum for lift!”	continuous	on	<p><b>REQUIRED ACTION:</b> <i>Immediately lower load onto stable support until sufficient vacuum can be obtained.</i></p> <p><b>Condition:</b> <u>Load sensor</u> has detected that load is being lifted with insufficient vacuum.</p> <p><b>Solution:</b> Make sure vacuum indicators show sufficient vacuum and try again.</p>
V000	“INSUFFICIENT VACUUM!”	continuous	on	<p><b>REQUIRED ACTION:</b> <i>Immediately lower load onto stable support until sufficient vacuum can be obtained.</i></p> <p><b>Condition:</b> Vacuum level is insufficient for lifting.</p> <p><b>Solution:</b> Check load and <u>vacuum pads</u> for damage, as directed in “<a href="#">Pad Inspection</a>”.</p>
V001 V002 V003 V004	“INSUFFICIENT VACUUM #!” (# indicates relevant vacuum circuit)	continuous	on	<p><b>REQUIRED ACTION:</b> <i>Immediately lower load onto stable support until sufficient vacuum can be obtained.</i></p> <p><b>Condition:</b> Vacuum level in circuit indicated is insufficient for lifting.</p> <p><b>Solution:</b> Check load and <u>vacuum pads</u> for damage, as directed in “<a href="#">Pad Inspection</a>”.</p> <p><i>Note: These codes can also be activated in connection with Code N00.</i></p>
V011 V012 V013 V014 V015	“Vacuum decrease on circuit #” (# indicates relevant vacuum circuit)	3 chirps	(none)	<p><b>Condition:</b> Vacuum decreased at faster rate than expected in circuit(s) indicated.</p> <p><b>Solution:</b> Check for likely causes, including:</p> <ul style="list-style-type: none"> <li>bouncing or landing load;</li> <li>use on rough or porous loads;</li> <li>other sources of vacuum leaks.</li> </ul> <p>Eliminate leaks when possible (see “<a href="#">Pad Inspection</a>” and “<a href="#">Vacuum Test</a>”).</p>

# MAINTENANCE

Code	On-Screen Message	Buzzer Pattern	Strobe Light Activity	Explanations/Directions
V020	"Vacuum not increasing normally"	1 chirp every 2 seconds	on	<p><b>Condition:</b> After lifter began to attach, vacuum level did not increase at normal rate.</p> <p><b>Solution:</b> Make sure all <u>vacuum pads</u> seal securely (see "Sealing the Pads on the Load" and "Reading the Vacuum Gauges").</p> <p><i>Note: This Code can be activated by use at high elevation. If so, contact WPG for directions.</i></p>
V03A V03B	"Pump running excessively"	1 chirp every 2 seconds	(none)	<p><b>Condition:</b> <u>Vacuum pump</u> is running more often than normal.</p> <p><b>Solution:</b> Likely causes/solutions include:</p> <ul style="list-style-type: none"> <li>significant vacuum leak: Check for fault(s) in vacuum system (see "Pad Inspection" and "Vacuum Test").</li> <li>high elevation prevents lifter from achieving minimum vacuum level: Contact WPG for directions.</li> </ul>
V04	"Lockout (vacuum sensor error)"	continuous	(none)	<p><b>Condition:</b> A <u>vacuum sensor</u> malfunction prevents "attach" and "release" functions from working, once "Power Save" mode has been activated.</p> <p><b>Solution:</b> Make sure sensor connectors are attached correctly.</p>
V05	"DANGER! INSUFFICIENT VACUUM!"	continuous	on	<p><b>REQUIRED ACTION:</b> <i>Keep everyone away from suspended load until it can be safely lowered onto stable support.</i></p> <p><b>Condition:</b> Vacuum levels in BOTH circuits are insufficient for lifting.</p> <p><b>Solution:</b> Service is required.</p>
V081 V082 V083 V084	<p>"Sensor # error (low)"</p> <p>(# indicates relevant vacuum circuit)</p>	<p>continuous in "attach" mode;</p> <p>1 chirp every minute in "power save" mode</p>	(none)	<p><b>Condition:</b> <u>Vacuum sensor</u> malfunction in vacuum circuit indicated.</p> <p><b>Solution:</b> Make sure sensor connector is attached correctly.</p>
V091 V092 V093 V094	<p>"Sensor # error (high)"</p> <p>(# indicates relevant vacuum circuit)</p>	<p>continuous in "attach" mode;</p> <p>1 chirp every minute in "power save" mode</p>	(none)	<p><b>Condition:</b> <u>Vacuum sensor</u> malfunction in vacuum circuit indicated.</p> <p><b>Solution:</b> Make sure sensor connector is attached correctly.</p>

# REPLACEMENT PARTS

Stock No.	Description	Qty.
98815	Integrated Counter-Balancer (option)	(1)
93022	Quick Connector – 1/8 FNPT – Male End – Single w/45° Barb	16
65442CA	Vacuum Hose – 0.160" ID x 1/4" OD – Red	*
65442AM	Vacuum Hose – 0.245" ID x 3/8" OD x 48" Length – Coiled – Green	4
65441	Vacuum Hose – 0.245" ID x 3/8" OD x 48" Length – Coiled – Red	4
65440TR	Vacuum Hose – 0.245" ID x 3/8" OD – Transparent Red	**
65440	Vacuum Hose – 0.245" ID x 3/8" OD – Red	*
65439BM	Vacuum Hose – 3/32" ID x 5/32" OD – Green	*
65439AM	Vacuum Hose – 3/32" ID x 5/32" OD – Red	*
65437TG	Vacuum Hose – 0.245" ID x 3/8" OD – Transparent Green	**
65437	Vacuum Hose – 0.245" ID x 3/8" OD – Green	*
65429BM	Vacuum Hose – 0.160" ID x 1/4" OD – Green	*
65380	Counterweight Plate (option)	(16)
65380WC	Weight Clamp (option)	(2)
65010	Pad Spring – Coil Type	16
64713	Battery Charger – 7 Amp – 240 V AC – Australian Type	1
64712	Battery Charger – 7 Amp – 240 V AC	1
64711	Battery Charger – 7 Amp – 100 / 120 V AC	1
64669	Battery – 12 V DC – 80 Amp-Hours	1
59028	Movable Pad Mount – 2-1/2" Tubing Size	16
53122	Pad Fitting – Elbow – 5/32" ID	16
49646T	Vacuum Pad – Model G3370 / 11" [28 cm] Diameter – Lipped	16
49150	End Plug – 2-1/2" x 2-1/2" x 1/4" Tubing Size	8
36108	Service Manual – 12 V DC – Dual Vacuum System – Powered Motion – Intelli-Grip®	1
29353	Pad Cover	16
16056	Quick Connector – 1/8 FNPT – Female End	8
15630	Pad Filter Screen – Large	16
15624	Hose Fitting – Y-Connector – 1/4" Barb	4
13534	Cotterless Hitch Pin – 1/2" x 4" (for optional integrated counter-balancer)	(2)
13532	Cotterless Hitch Pin – 1/2" x 3-3/8"	20
13220	Hairpin Cotter Pin	1
10900	Shoulder Bolt – Socket Head – 5/16" x 1/2" x 1/4-20 Thread (for mounting pads)	96

\* – Length as required; sold by the inch (approx 2.5 cm).

\*\* – For use with barbed fittings only. Do not use with "push-in"-style fittings. Maximum pressure rating: 90 psi @ 75° F [172 kPa @ 24° C]. Length as required; sold by the inch (approx 2.5 cm).

See **SERVICE MANUAL #36108** for additional parts.

**SERVICE ONLY WITH IDENTICAL REPLACEMENT PARTS,  
AVAILABLE AT [WPG.COM](http://WPG.COM) OR THROUGH AN AUTHORIZED WPG DEALER**

# REGISTRATION AND LIMITED WARRANTY

## TO REGISTER THIS WPG PRODUCT

Go to the [PRODUCT REGISTRATION](#) page at [wpg.com](#) and complete the form. Registration keeps you advised of important updates and notifications, and simplifies inquiries to WPG regarding your product. Registration is **not** required to activate your Limited Warranty (see next section).

## ABOUT THE LIMITED WARRANTY

*Note: Read the [WARRANTY RETURN FORM](#) at [wpg.com](#) for important details about the Limited Warranty.*

Wood's Powr-Grip® (WPG) products are warranted to be free from defects in manufacturing and materials for 1 year from the date of purchase.

If a problem develops during the warranty period, follow the instructions below to obtain warranty service. If inspection shows that the product has a defect, WPG will repair or replace the product without charge.



## Obtaining Warranty Service or Repair Service

**For customers in the U.S. and Canada:** Go to the [EXCHANGES, REPAIRS, & WARRANTIES](#) page at [wpg.com](#) and click the applicable link. Alternatively, you may contact the WPG Technical Service Department (see contact information below).

**For customers in all other localities:** Contact the WPG Technical Service Department (see contact information below) or your dealer for assistance.

ADDRESS	EMAIL	PHONE
Wood's Powr-Grip Co., Inc. 908 West Main St. Laurel, MT USA 59044	<a href="mailto:contactus@wpg.com">contactus@wpg.com</a>	(1) 800-548-7341 (1) 406-628-8231

INTENDED FOR USE BY QUALIFIED SERVICE PERSONNEL

# ENGINEERING DRAWINGS



**READ AND UNDERSTAND BEFORE ROUTING,  
WIRING AND/OR ASSEMBLING**



908 W. Main • P.O. Box 368  
Laurel, MT USA 59044  
(1) 800-548-7341 • (1) 406-628-8231  
[www.wpg.com](http://www.wpg.com)

**MANUL ROTATOR /  
POWER TILTER 2800,  
WITH INTELLI-GRIP®  
TECHNOLOGY, DC-VOLTAGE**  
(Available with INTEGRATED COUNTER-BALANCER)

Model number: MRPT1611LDC3


FILE DIRECTORY: 20170901.00.00  
 FILE (SHEET): **PROJECT** **NPRD0062L-W01 [L-W01]**

THIS DRAWING IS THE PROPERTY OF **WOOD'S POWR-GRIP CO., INC.** LAUREL, MONTANA U.S.A.  
 IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.

**WPG**


2800# MANUAL ROTATE/POWER TILT  
 LIFT BAR  
 MODULE C WIRING SCHEMATIC  
 NPRD0062L-W01 [L-W01]

TYPE: <b>A</b>	SCALE: <b>NONE</b>	REVISION: <b>00.A</b>	ECN NUMBER: <b>VER00.A</b>	ECN DATE: <b>07/16/2018</b>	ECN BY: <b>MAP</b>	EST. WEIGHT: <b>N/A</b>
WIRE LEGEND: CONTROLLED BY WIRING SYMBOLS DRAWING EXCEPT AS NOTED AND BELOW.	DATE: <b>07/10/2018</b>	PRODUCT MANAGER: <b>DANIEL M.</b>	DATE: <b>06/11/2019</b>			
LINE STYLES AND WIDTHS FOR WIRE UNLESS NOTED OTHERWISE: 24AWG 22AWG 20AWG 16AWG CAT5 14AWG 12AWG 6AWG	CHECKED: <b>MAP</b>	APPROVED:				

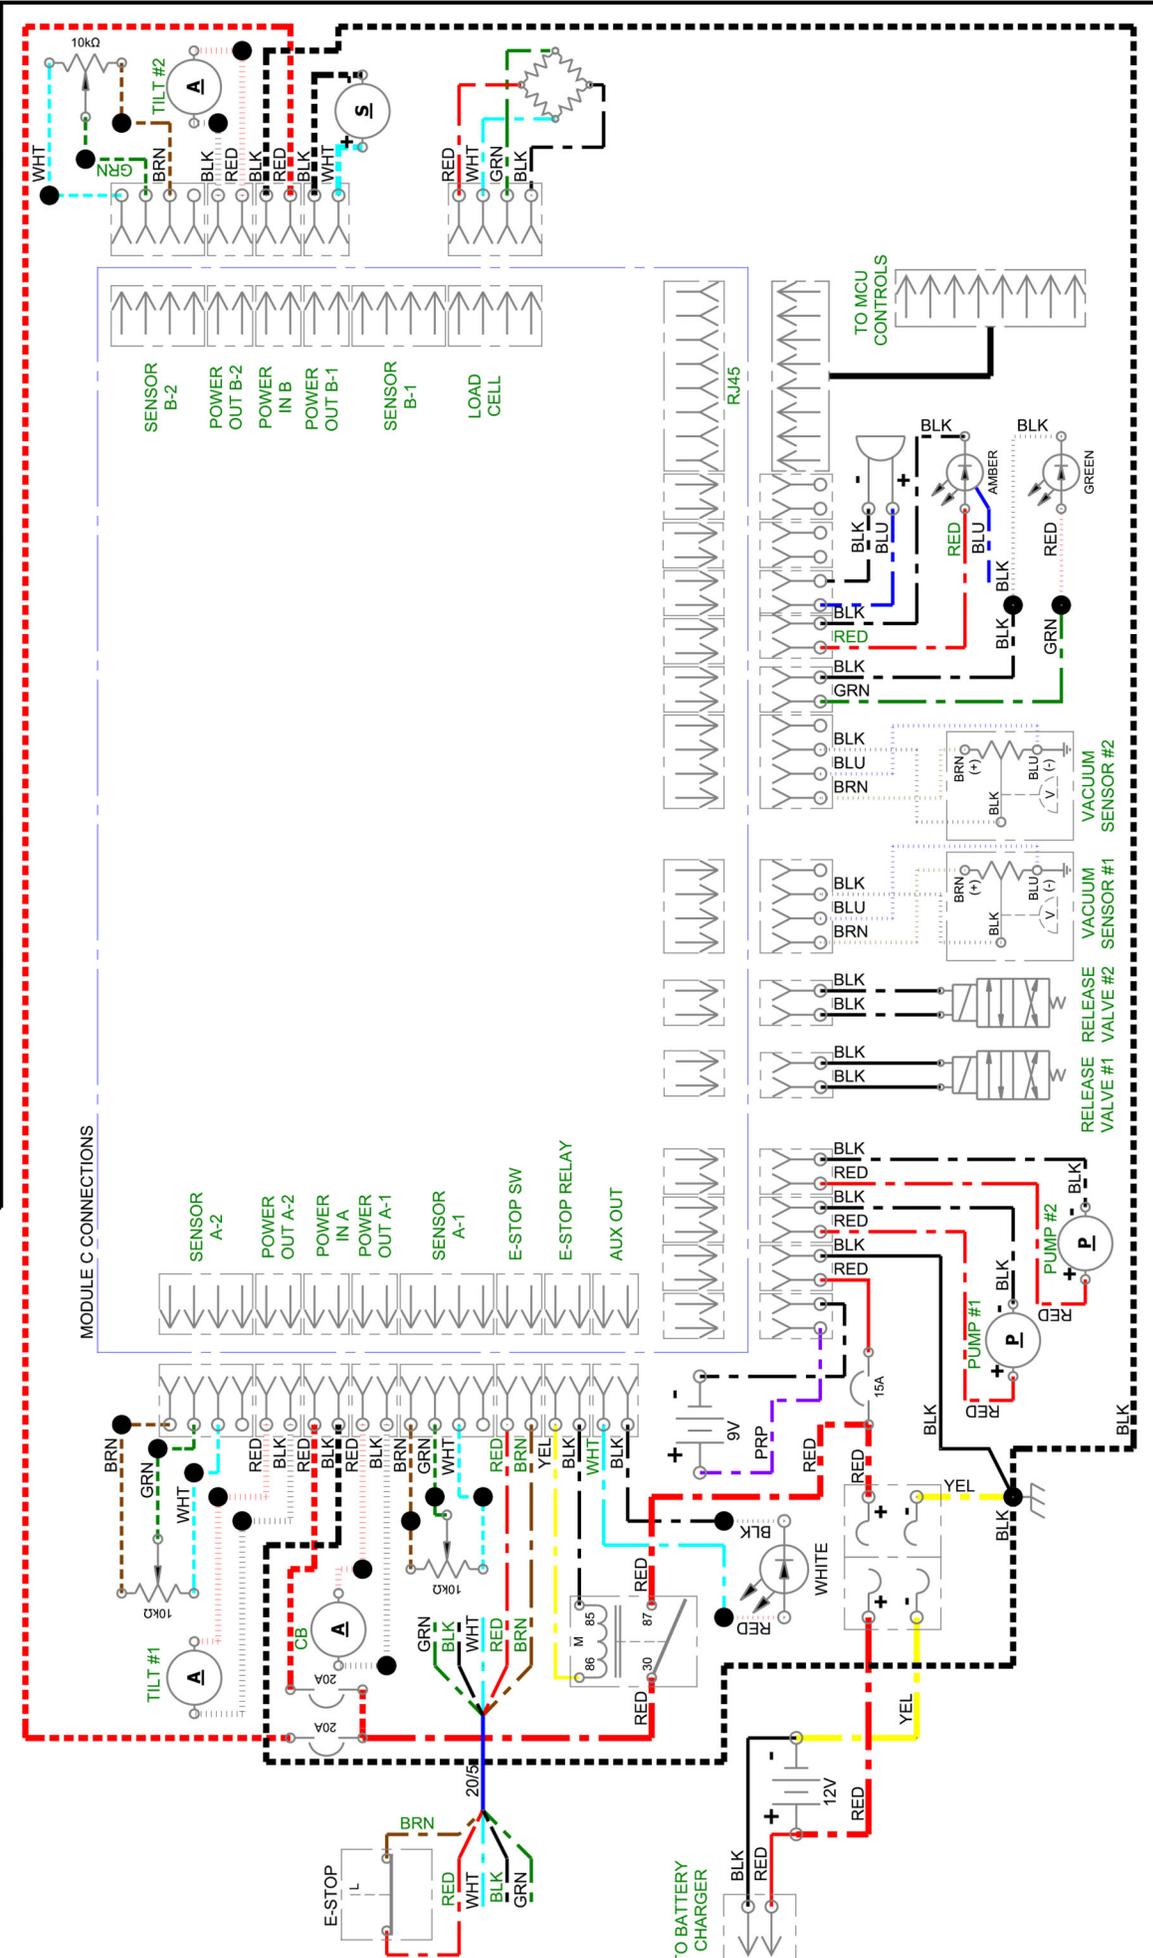

TOLERANCES: CONTROLLED BY STANDARD DN05C001 EXCEPT AS NOTED AND LISTED BELOW. DECIMAL X.XX ± N/A ANGULAR X° ± N/A FRACTIONAL X/XX ± N/A X.XXX ± N/A Ø X.XXX ± N/A UNITS: INCHES (MILLIMETERS), DO NOT SCALE.		FILE DIRECTORY: 20170901.00.00 FILE (SHEET): NPRD0062L-W02 [L-W02]
PROJECT: 2800# MANUAL ROTATE/POWER TILT LIFT BAR PNEUMATIC HOSE SCHEMATIC NPRD0062L-W02 [L-W02]		THIS DRAWING IS THE PROPERTY OF WOOD'S POWR-GRIP CO., INC., LAUREL, MONTANA U.S.A. IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.
PRODUCT MANAGER: DANIEL M. CHECKED: MAP APPROVED:	DATE: 07/10/2018 03/15/2019	REVISION: 00.A VER00.A ECN NUMBER: MAP ECN DATE: 07/16/2018 ECN BY: MAP EST. WEIGHT: N/A

HOSE SIZES AND COLORS - - - 5/32" OD (GREEN) . . . . . 5/32" OD (RED) ——— 1/4" OD (GREEN) - - - 1/4" OD (RED) ——— 3/8" OD (GREEN) - - - 3/8" OD (RED)
---

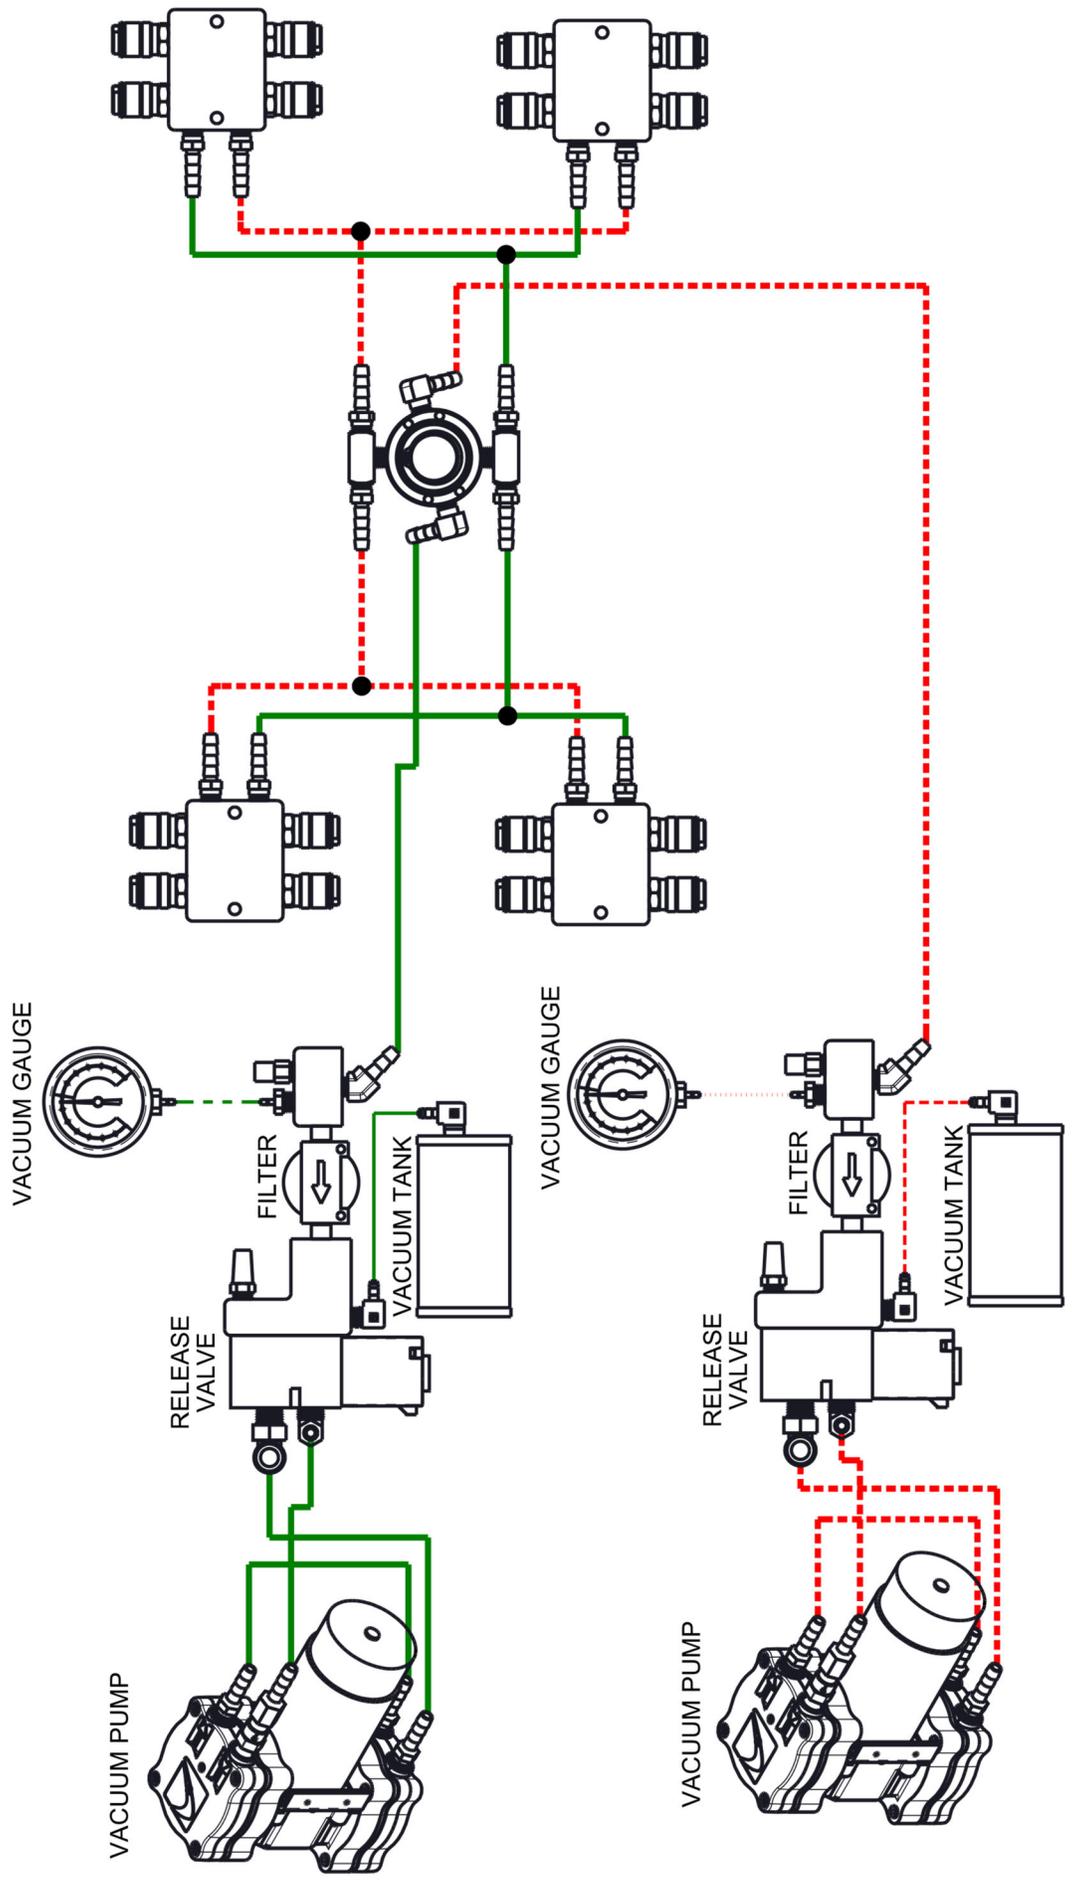

FILE DIRECTORY: 20170901.00.00  
 FILE (SHEET): NPRD0062L-W03 [L-W03]

TYPE: PROJECT

THIS DRAWING IS THE PROPERTY OF WOOD'S POWR-GRIP CO., INC. IT IS LOANED WITH THE UNDERSTANDING THAT NEITHER IT NOR ANY INFORMATION CONTAINED THEREIN WILL BE COPIED, PUBLISHED OR TRANSMITTED TO OTHERS WITHOUT EXPRESS WRITTEN PERMISSION.

WOOD'S POWR-GRIP CO., INC.  
 1 LAUREL MONTANA U.S.A.

28000# MANUAL ROTATE/POWER TILT LIFT BAR  
 RADIO RECEIVER WIRING SCHEMATIC  
 NPRD0062L-W03 [L-W03]

WIRE LEGEND: CONTROLLED BY WIRING SYMBOLS DRAWING EXCEPT AS NOTED AND BELOW.  
 LINE STYLES AND WIDTHS FOR WIRE UNLESS NOTED OTHERWISE:  
 N/A - 26 AWG - N/A - 18 AWG - N/A  
 N/A - N/A - N/A - N/A

PRODUCT MANAGER: DANIEL M.  
 DATE: 07/17/2018

CHECKED: MAP  
 DATE: 03/15/2019

APPROVED:

SIZE: A NONE REVISION: 00.A VER 00.A ECN NUMBER: 07/17/2018 ECN DATE: BKS EST. WEIGHT: N/A

