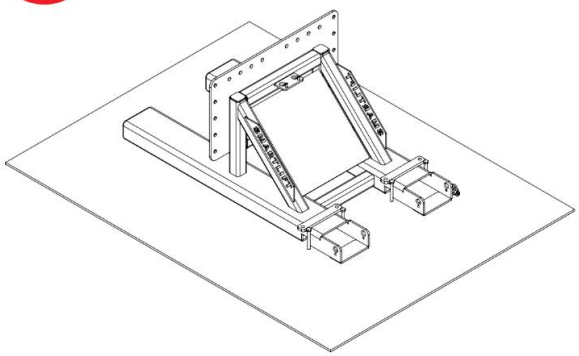
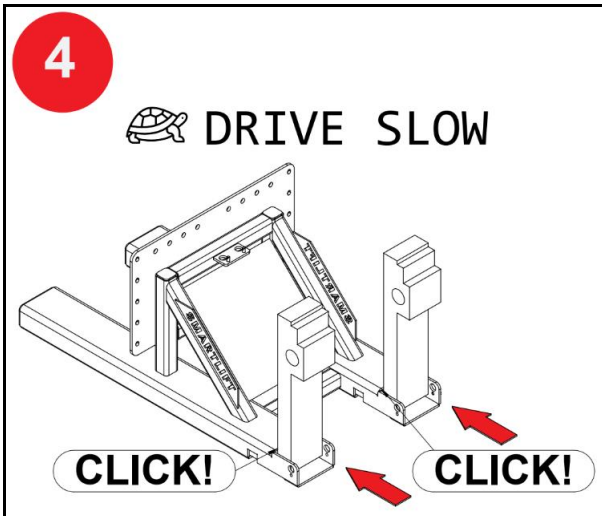
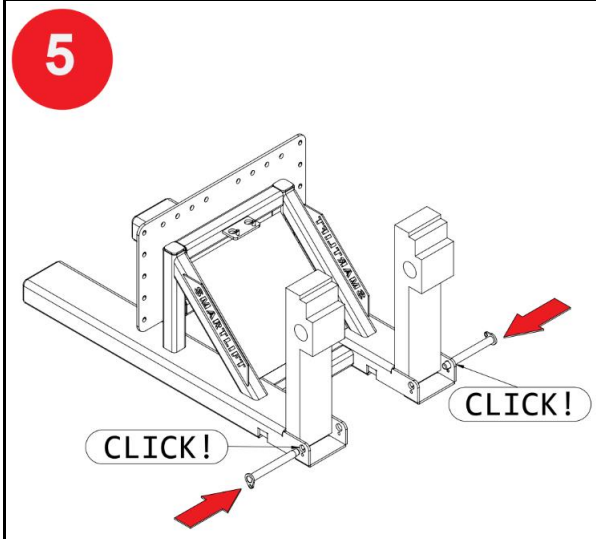
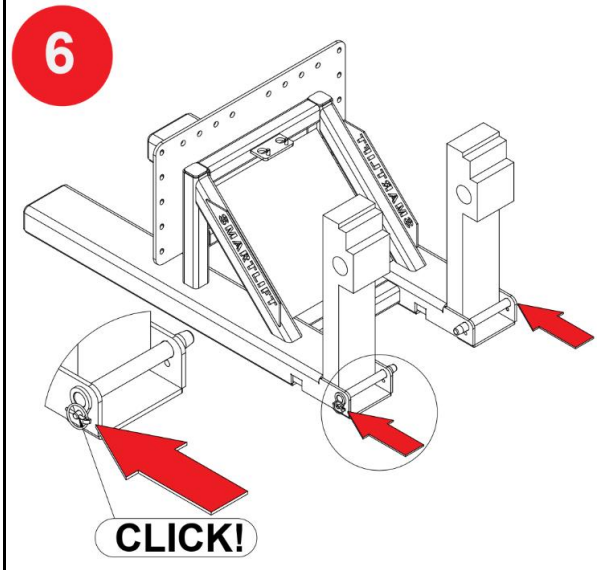
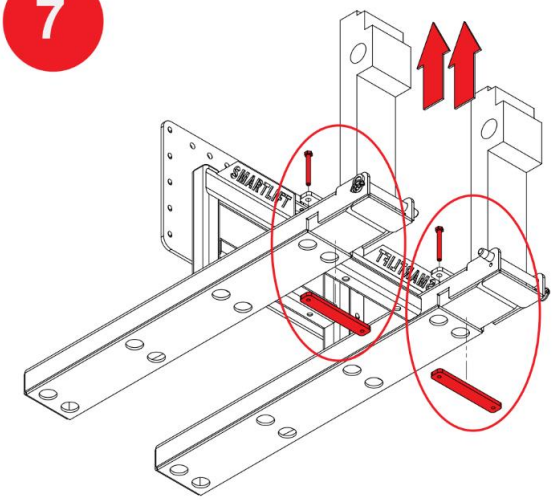
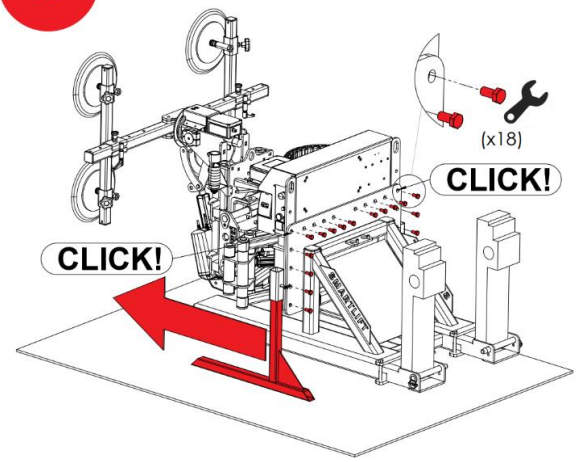
Step	Instruction
1 	READ the following user manuals! • User manual for the Telehandler! • User manual for the adapter! • User manual for SL400RT! Read and understand all safety instructions before doing anything at all! ONLY Instructed and trained personnel may operate this equipment!
2 	Review carefully and understand the load diagram for the telehandler (Parent machine). If in doubt ask the supplier of the telehandler. NOTE! The telehandler must have a load capacity of at least 2000kg (4410lb)
3 	Place the adapter on an equal, clean and supporting surface.

	Drive the forks into the adapter and stop by physical contact.
	Mount the 2 lock bolts at the backend of the fork sleeves.
	Secure the lock bolts with the 2 lock pins.

7 	Lift the forks to get access from underneath of the adapter and mount the 4 lock screws in the 2 loose lock plate underneath the forks.
8 	Place the SL 400 RT in supporting legs on a level and firm surface and slide the adapter underneath until physical contact between connection plates and mount and tighten the 18 connection screws. Alternatively, the SL400 RT can be placed on 2-3 pallets to make it possible to get the adapter underneath. Remove the supporting legs (2x) before performing the following lifting operations.